

LevelMaster 7100 safety and compliance

Safety

Observe and follow warning signs on packaging, in documentation, and on the device.

Potential safety hazards

The LevelMaster uses voltages in the range of 9-12 Vdc plus some percent of tolerance. There are no hazardous voltages present in the device. However, some optional power sources may convert power from Vac to Vdc.

Pressurized natural gas is present in the measurement pipeline and may escape during installation, calibration, or following damage to the pipeline. Only properly trained and authorized personnel should work in hazardous locations.

There are no chemical or burn hazards. Personal Protection Equipment is not required.



WARNING – Bodily injury. Apply power only after the procedures are complete. Technicians must perform the procedures in order: plan, install, wire, verify the power-on sequence, and configure.



WARNING – Bodily injury. Ensure there is no hazardous atmosphere present when performing maintenance on the unit. Do not separate components when energized. This applies to all connectors and connections, cabling and wiring.



NOTICE – Instructions are not printed. Use the following code to access User Manuals, Guides and Drawings.

LevelMaster 7100

