

G3-U20

G-Mation G3 – 20 Digital Outputs

USE AND INSTALLATION MANUAL

G3 U20 code F092702

code: 80652A - Ver 1.0 - 01-2025 - ENG



CONTENTS AND INDICES

1. PREFACE	4
1.1. Warnings and safety	4
1.2. Typographical conventions used in the manual.....	4
1.3. EtherCAT declaration	4
2. G-MATION G3 PLATFORM	5
2.1. System.....	5
2.2. Board modularity	6
2.3. Front polarisation.....	9
2.4. Mechanical dimensions	11
2.5. Front connector wiring	12
2.6. DIN rail mounting.....	13
2.6.1. G3-ECAT	13
2.6.2. G3-xxxx (all models unless otherwise specified).....	14
2.7. Positioning.....	17
3. TECHNICAL SPECIFICATIONS	18
3.1. Board equipment	18
3.2. Meaning of LEDs	19
3.3. Connections.....	20
3.3.1. Front connections	20
3.4. Resource software management.....	21
3.4.1. Module Objects	21
3.4.2. IOs managements	21
3.4.3. IOs Configuration objects	22
3.4.4. Control objects	23
3.5. Alarm Management	24
4. ACRONYM AND ORDER CODE	25
5. MARKING	26
6. SMALTIMENTO	27

1. PREFACE

1.1. Warnings and safety

Although all the information in this document has been carefully checked, Gefran S.p.A. cannot be held liable for the possible presence of errors, or for damage to persons or property due to improper use of this manual. Gefran S.p.A. also reserves the right to make changes to the content and form of this document and to the features of the devices it describes at any time without prior notice.

The devices described in this manual must be installed by qualified technicians, following current laws and regulations and in accordance with the instructions given in this manual. If the card is used in applications with risk of injury, or of damage to machinery or materials, it must be combined with auxiliary alarm devices. It is advisable to provide for the possibility of checking alarm activation also during normal operation.

Before interacting with the card, the operator must be adequately instructed in the system operation, emergency, diagnostics and maintenance procedures.

1.2. Typographical conventions used in the manual

Pay attention when the following symbols are found in the manual.



Indicates particularly important information relevant to correct product operation or safety, or provides instructions that must be strictly followed



Identifies an action that is possible / permitted



Highlights a risk condition for the installation technician or user due to hazardous voltage levels



Identifies an action that is NOT possible / NOT permitted

1.3. EtherCAT declaration

EtherCAT[®] 

EtherCAT[®] is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.

2. G-MATION G3 PLATFORM

2.1. System




G-Mation G3 is a modular IO system based on EtherCAT technology. EtherCAT provides a maximum of 65535 addressable modules.

A G3 rack of I/Os is composed of the system coupler, G3-ECAT, with a number of I/O boards on the right side as desired according to system needs and up to a maximum of 20.

The G3-ECAT module provides power supply for 20 boards.

If a number of boards greater than 20 is necessary, the power supply module G3-PWR must be inserted between the 20nd and 21st boards.



The boards are designed for coupling on a 35 mm DIN rail and the lateral coupling with the rack takes place by sliding to the left (refer to paragraph “2.6. DIN rail mounting” on page 13).

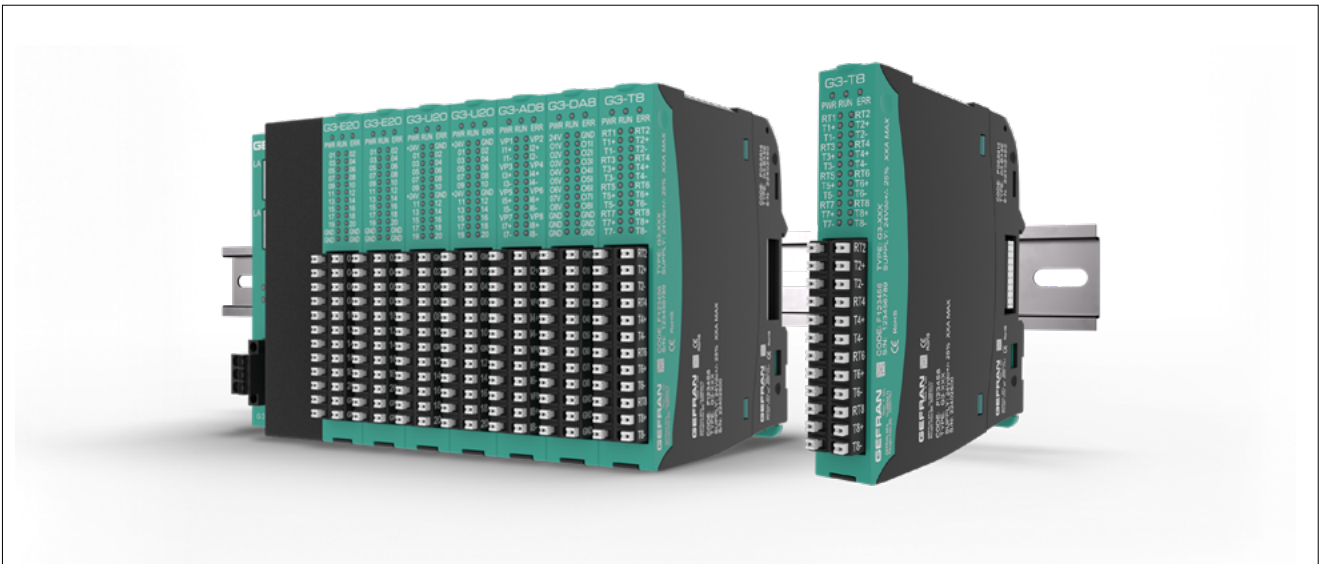

2.2. Board modularity


Each I/O board consists of three parts:

- **The base module:** it is the module that guarantees coupling with the din rail and bus transmission between one board and the next. It is called G3-BUS (F092614) and is common to all boards.
- **Electronics:** is the module that contains all the electronics dedicated to managing board I/Os. It is proprietary to each board.
- **The front:** it is the module that houses the push-in connector for the wiring and the front LEDs. It is proprietary to each board

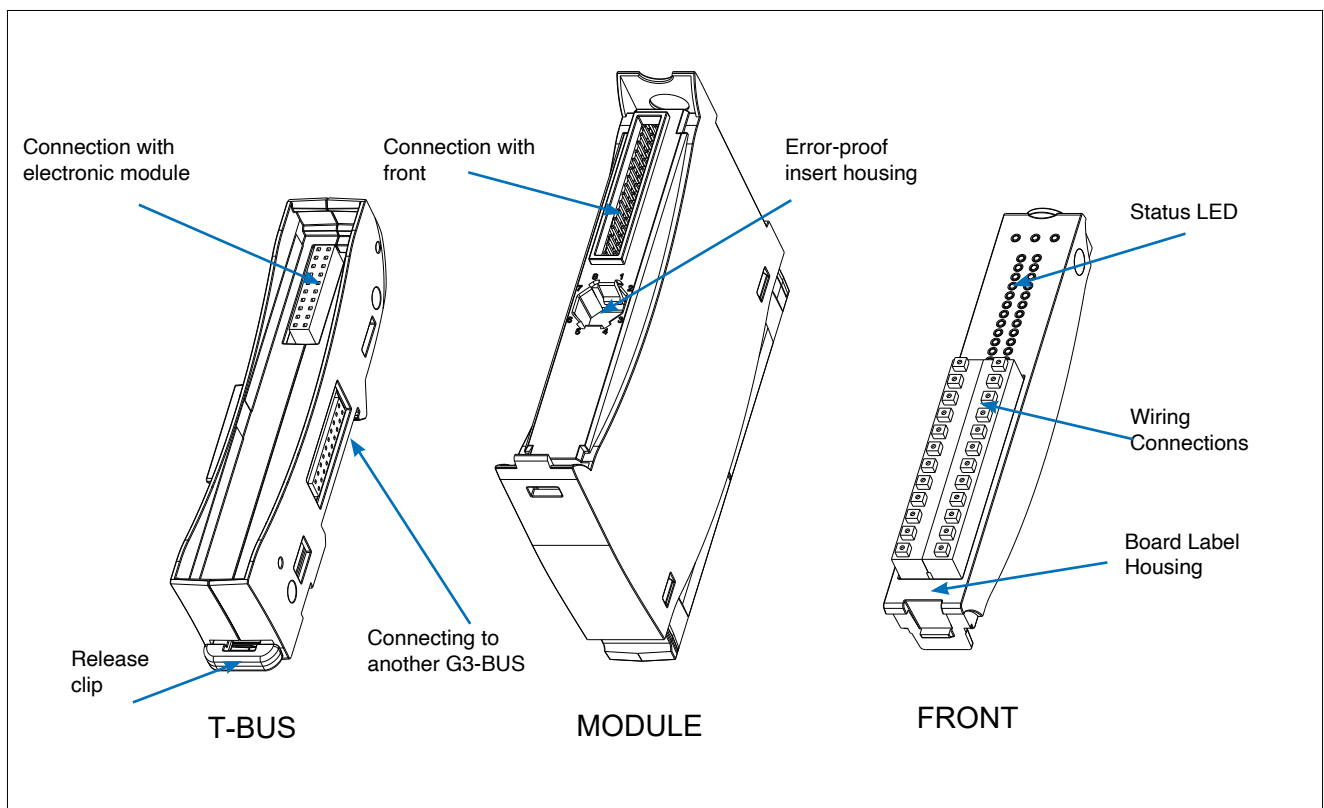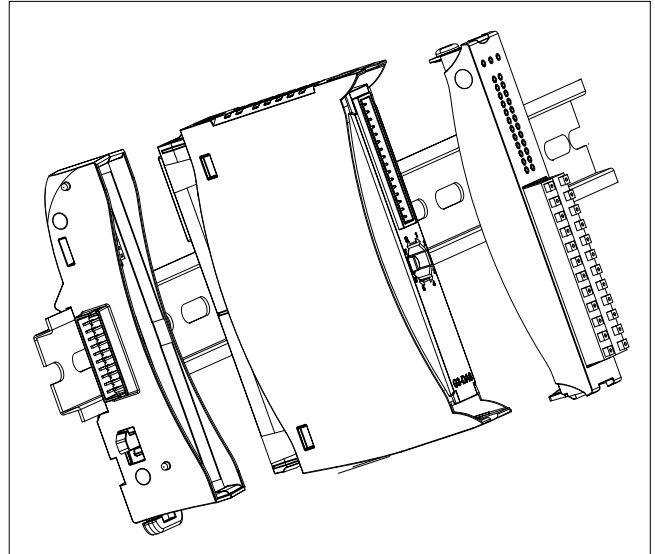


The coupling and uncoupling between the different parts is possible without the use of tools, using only your hands. The movement is constrained in such a way as to be easy and to prevent alignment errors that could compromise the connections.


Press the upper button as shown in the figure and pull the board down in the indicated direction to remove the front module.

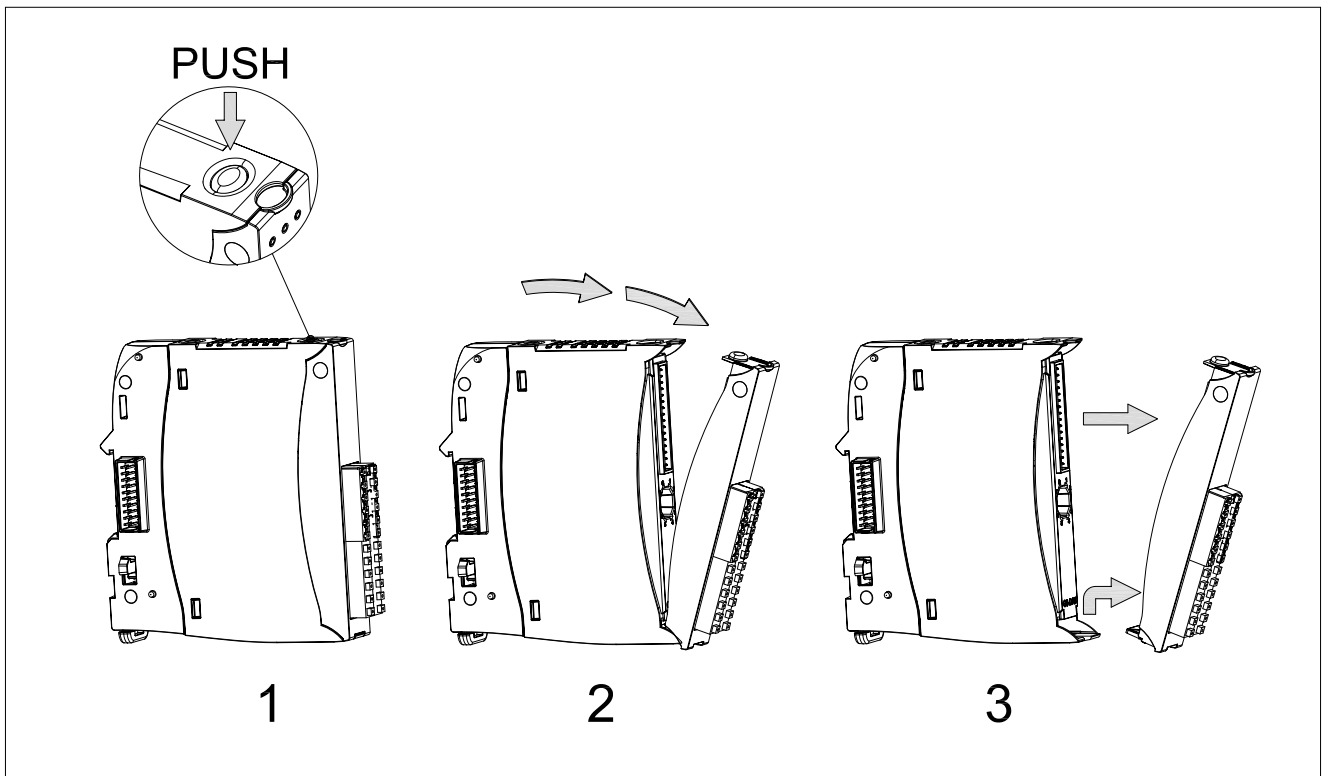


To re-couple the module, first place the lower part inside the constrained housing of the electronic part and then push the front until you feel the upper button couple.

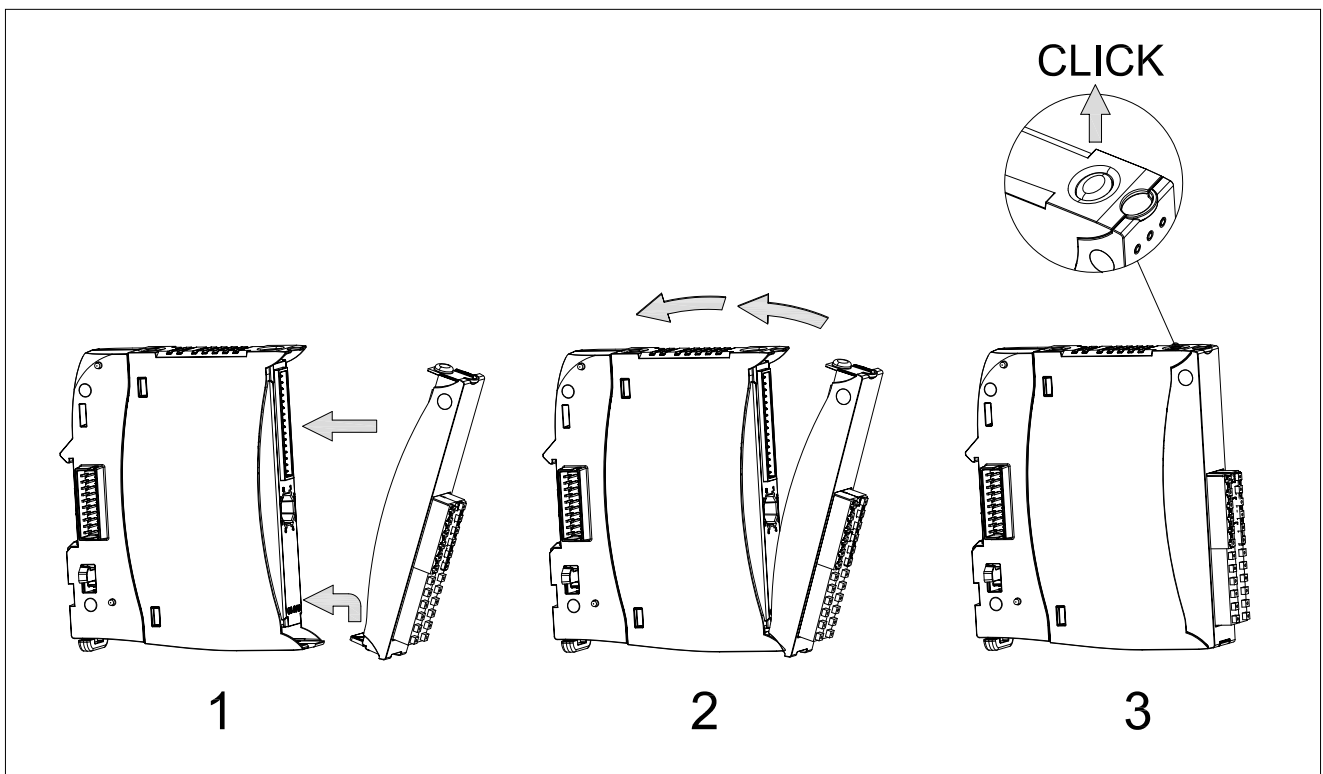

The electronic part can be detached from the base both with the front connected and without. To release the electronic part press the upper button as shown in the figure and pull the board down in the indicated direction.

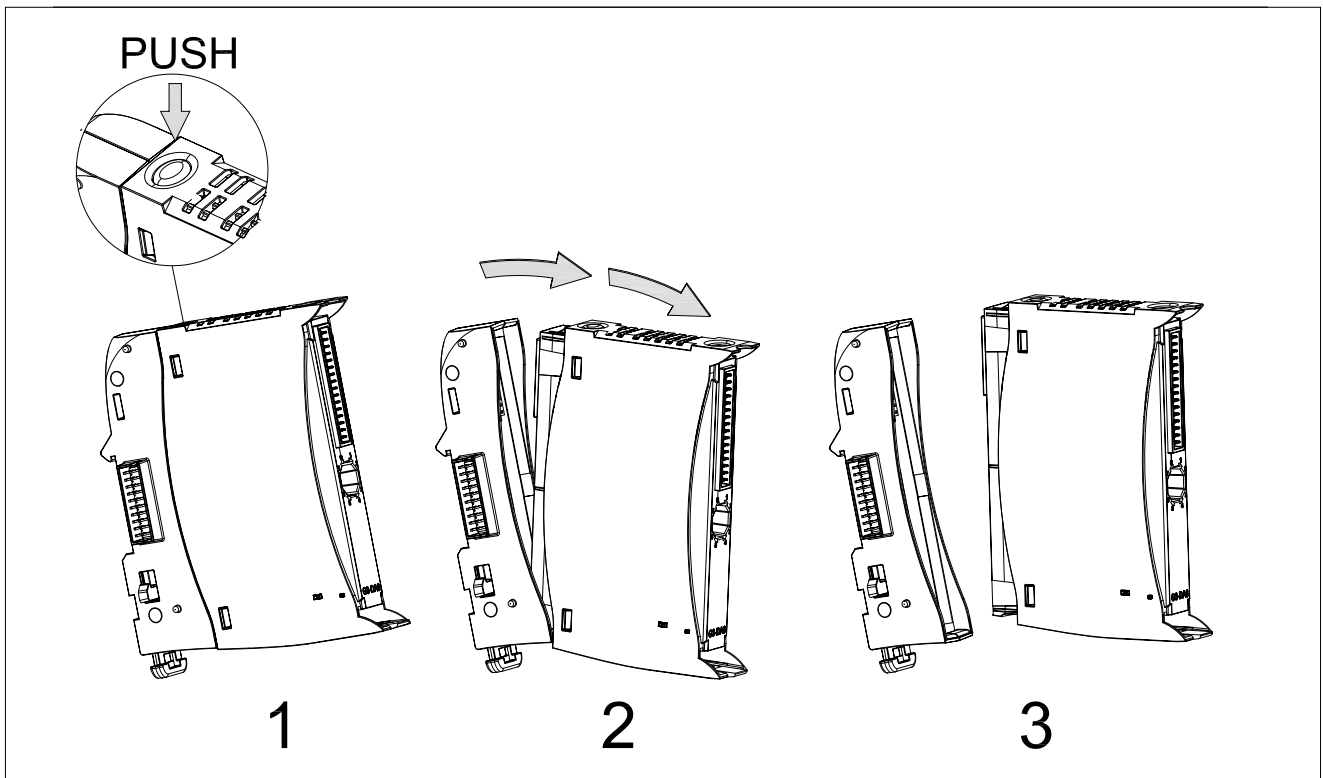

To re-couple the electronics, first place the bottom part inside the constrained housing of the base and then push the board until you feel the upper button couple.

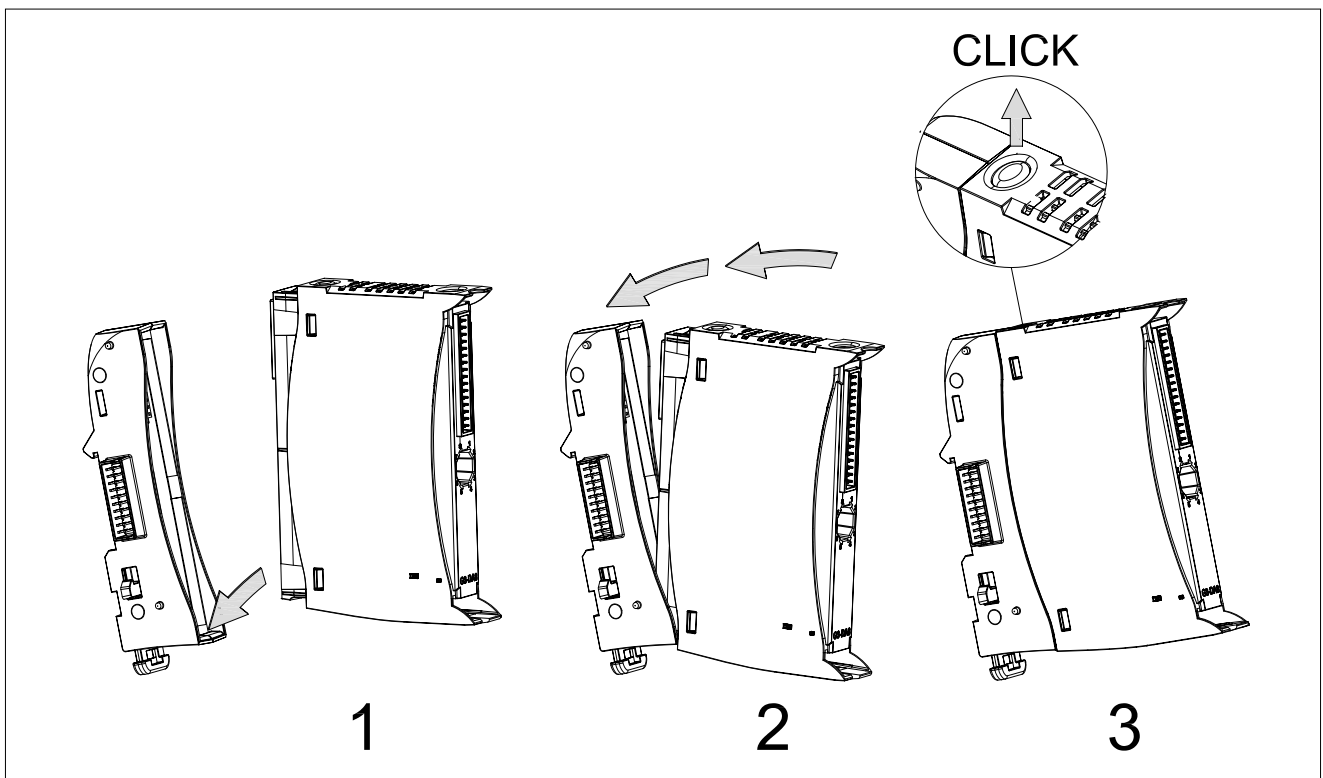


2.3. Front polarisation

A polarisation system is provided that allows you to associate a front to your board to avoid board and front positioning errors.


A kit of male-female coupled octagonal-shaped inserts may be provided as an accessory.

The figures on the insert are available in different versions so as to cover a wide range of combinations.


There is a housing for the male insert and one in the front for the female insert in the electronic part.

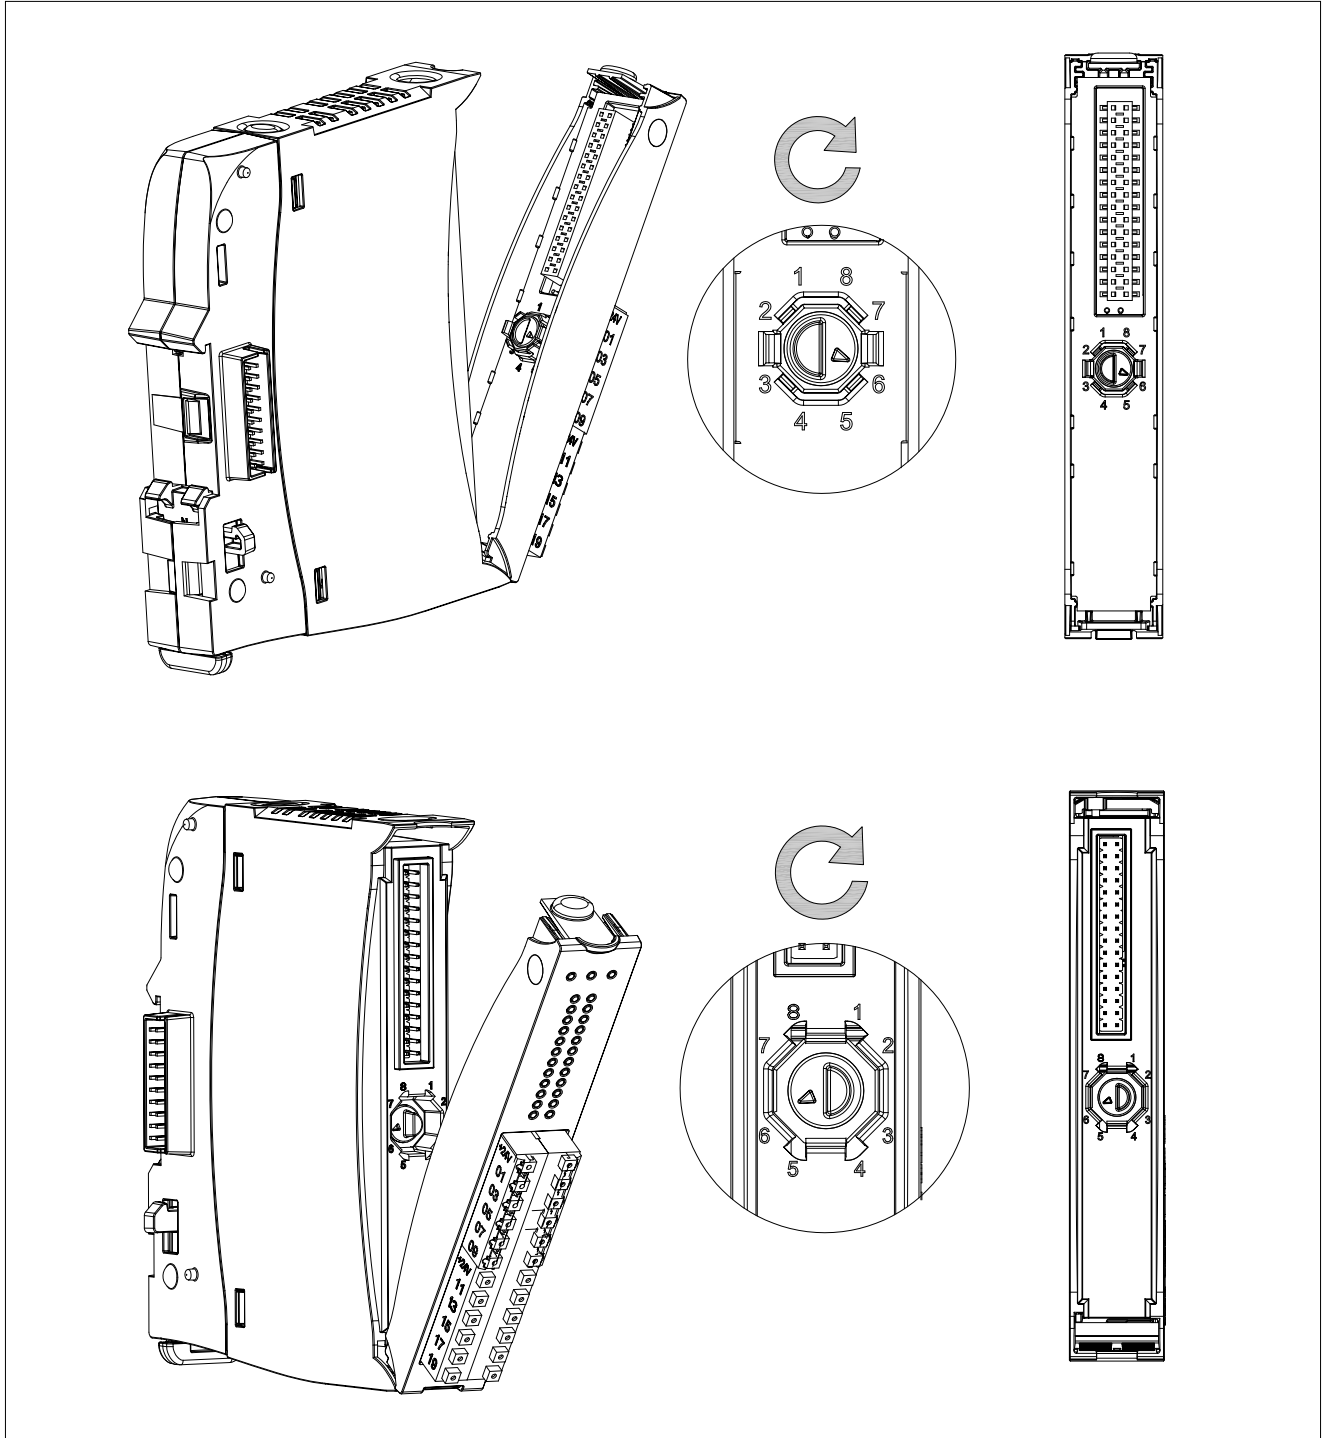

The insert must be mounted with the aid of tweezers and can be rotated in eight different positions. Proceed as shown in the figure by grasping the insert with tweezers to insert or remove the insert from the electronic board.

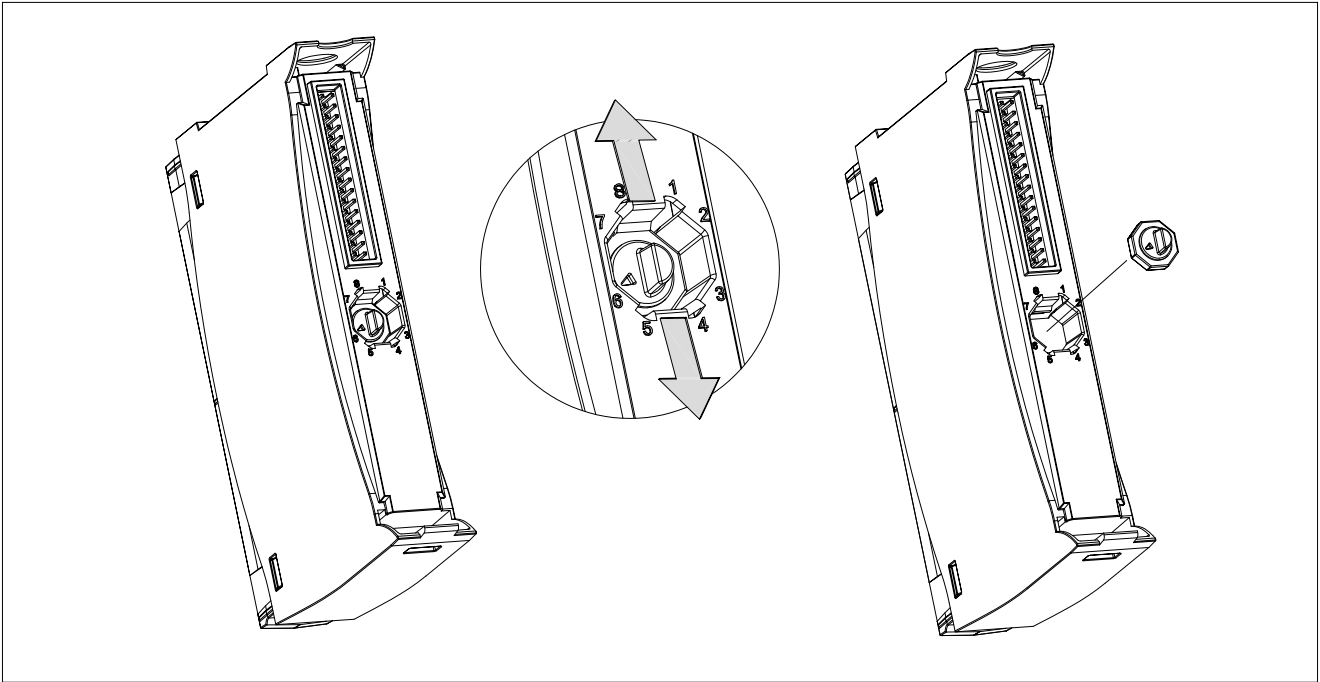

Proceed as shown in the figure by grasping the insert with tweezers to insert or remove the insert from the front module.

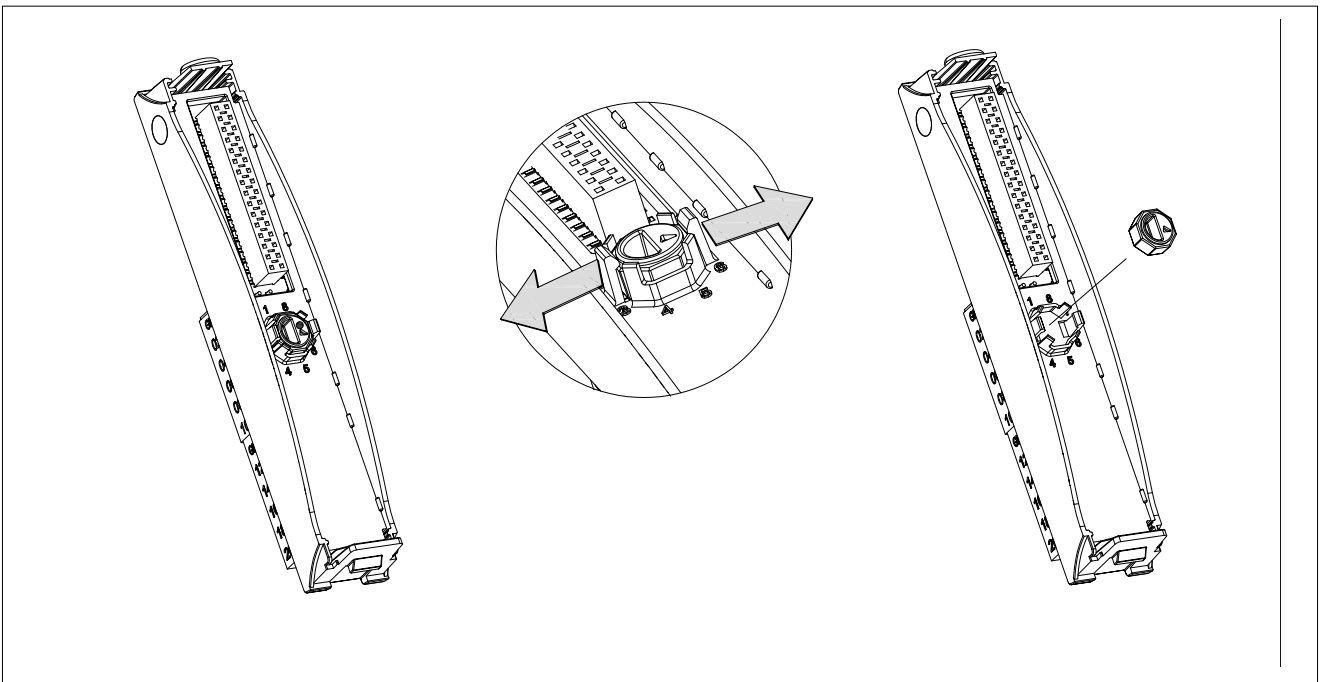


Once inserted, the inserts can be extracted and rotated as desired.


2.4. Mechanical dimensions

The mechanical dimensions of the product, without the DIN rail, may be seen in the image below.


Full G3-xxxx Board

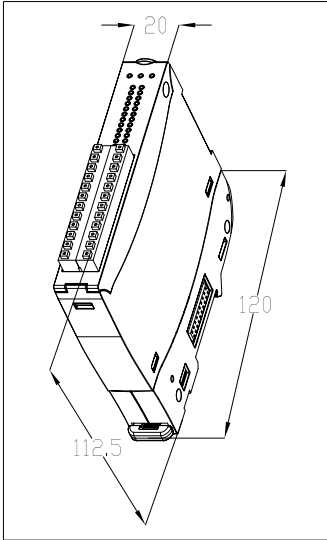


G3-ECAT hub head

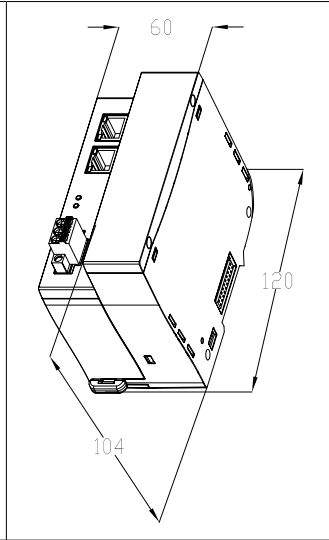


G3-JNC3

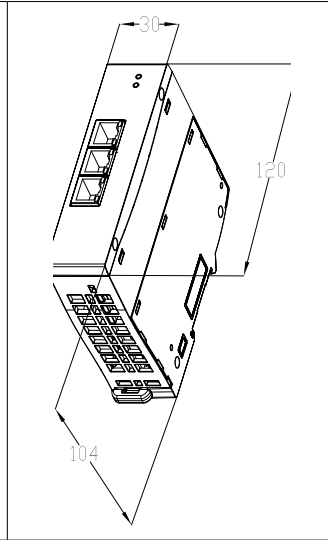


G3-JNC4

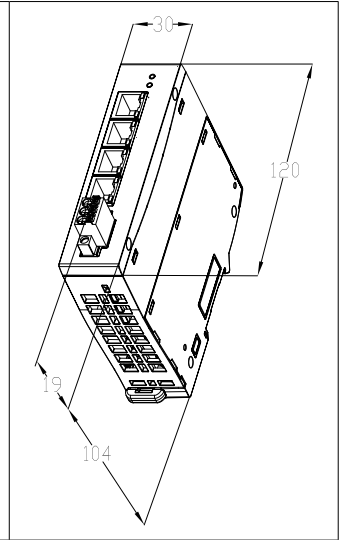


G3-BUS Base

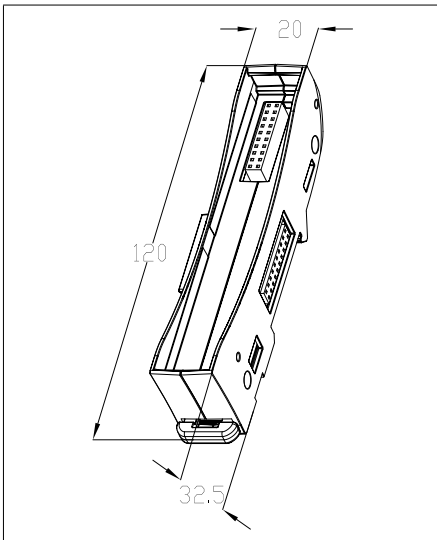

G3-xxxx E Electronic board

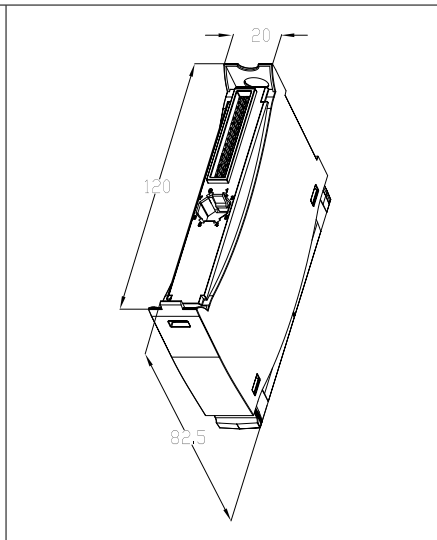

G3-xxxx F Front

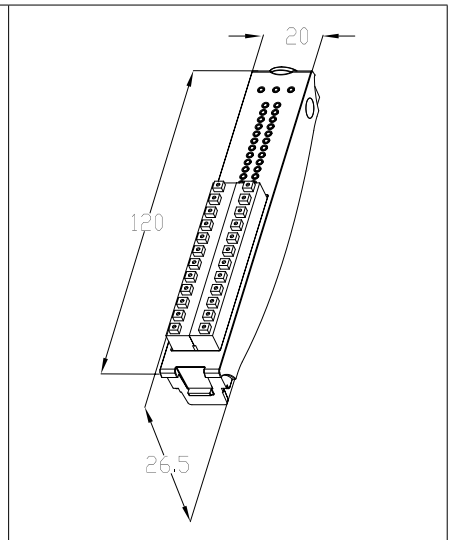

2.5. Front connector wiring

The connector can be wired both with the front coupled with the module and with the front detached from the module. The front connector can be placed on a bench to facilitate wiring.

For wiring, both the use of NON terminated flexible electrical wire and flexible electrical wire terminated with a TIP are allowed.

Use unipolar flexible electric wire with maximum section of 1.50 mm² (AWG 16) with 8 - 9 mm strip length. If a TIP is used, use a model with a section appropriate to the wire used and with a length of 8 - 9 mm.

To connect the wire **without TIP**:

press the button with a screwdriver insert the wire into the seat release the button.

To connect the wire **with TIP**:

push the tip directly into the seat

To disconnect the wire:


press the button with a screwdriver pull out the wire/tip
release the button

A pressed flexible wire can be used as an alternative to the TIP.



It is recommended NOT TO WELD the electric wire.


Minimum temperature rating of the cable to be connected to the field wiring terminals, 85 °C

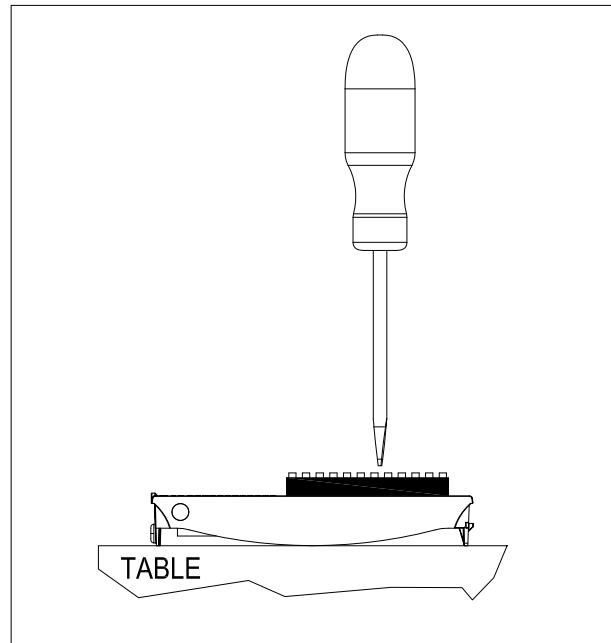


2.6. DIN rail mounting

2.6.1. G3-ECAT

To mount the G3-ECAT to the din bar, unclip the lower clip and leave it in the open stable position. Enter the top of the latch on the rail, rotate the board and place it on the DIN rail. Raise the lower clothespin slightly to free it and allow it to be hooked to the bar even in the lower part.

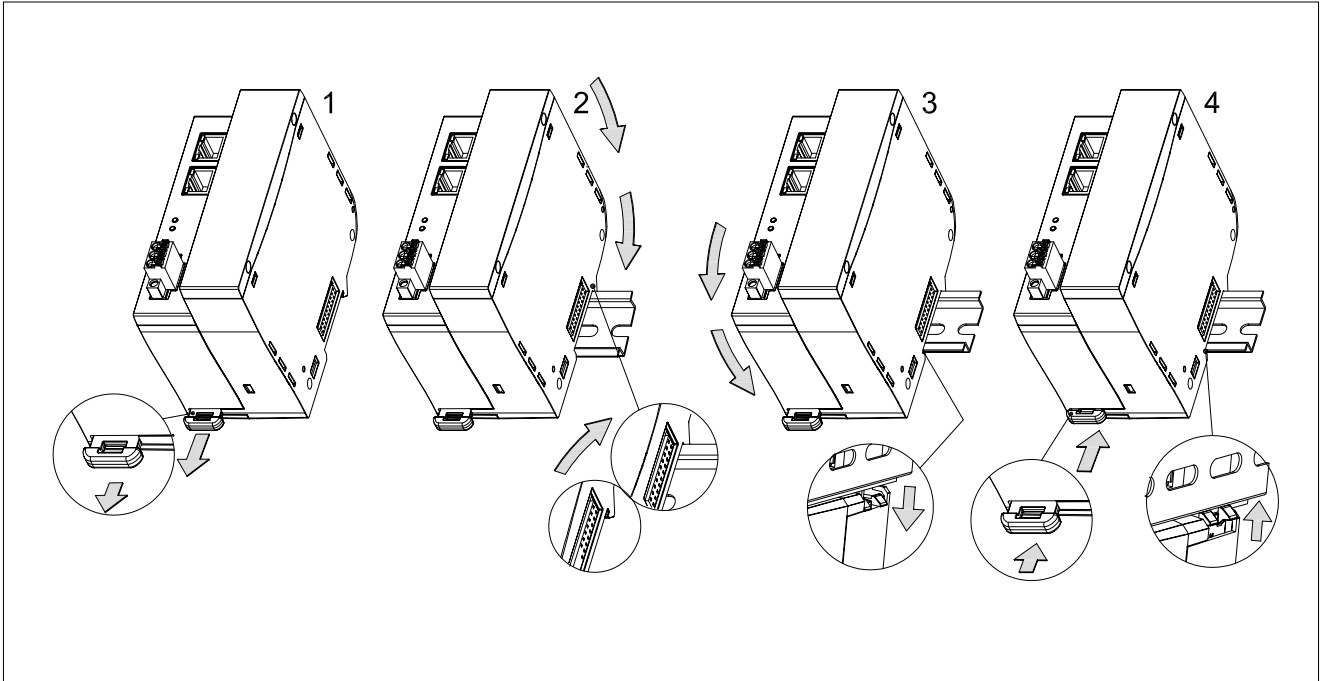


To remove the head the hub from the DIN rail, release the lower clip by slightly levering with a screwdriver and turn the board to release it.

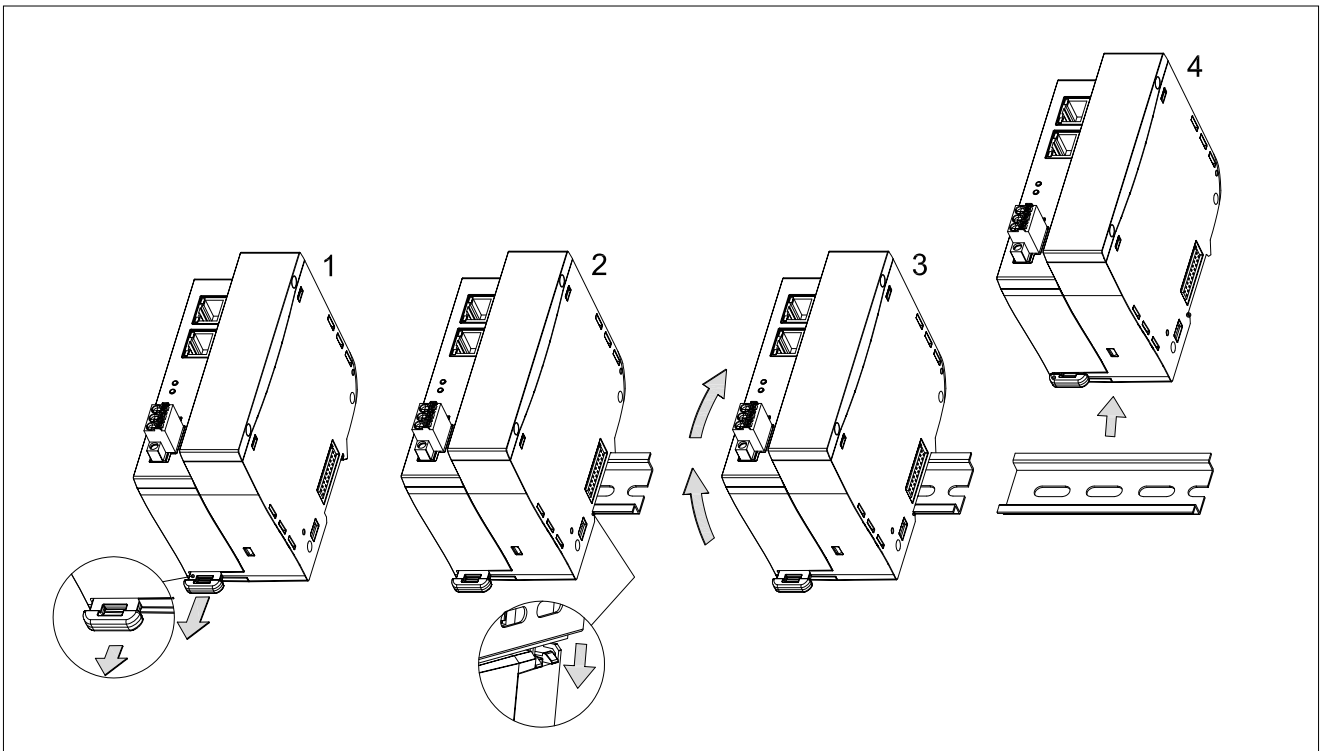


2.6.2. G3-xxxx (all models unless otherwise specified)



To mount the module to the din rail, unclip the lower clip and leave it in the open stable position. Insert the part top of the hook on the rail, rotate the board and place it on the DIN rail. Raise the lower clothespin slightly to free it and allow it to be hooked to the bar even in the lower part.

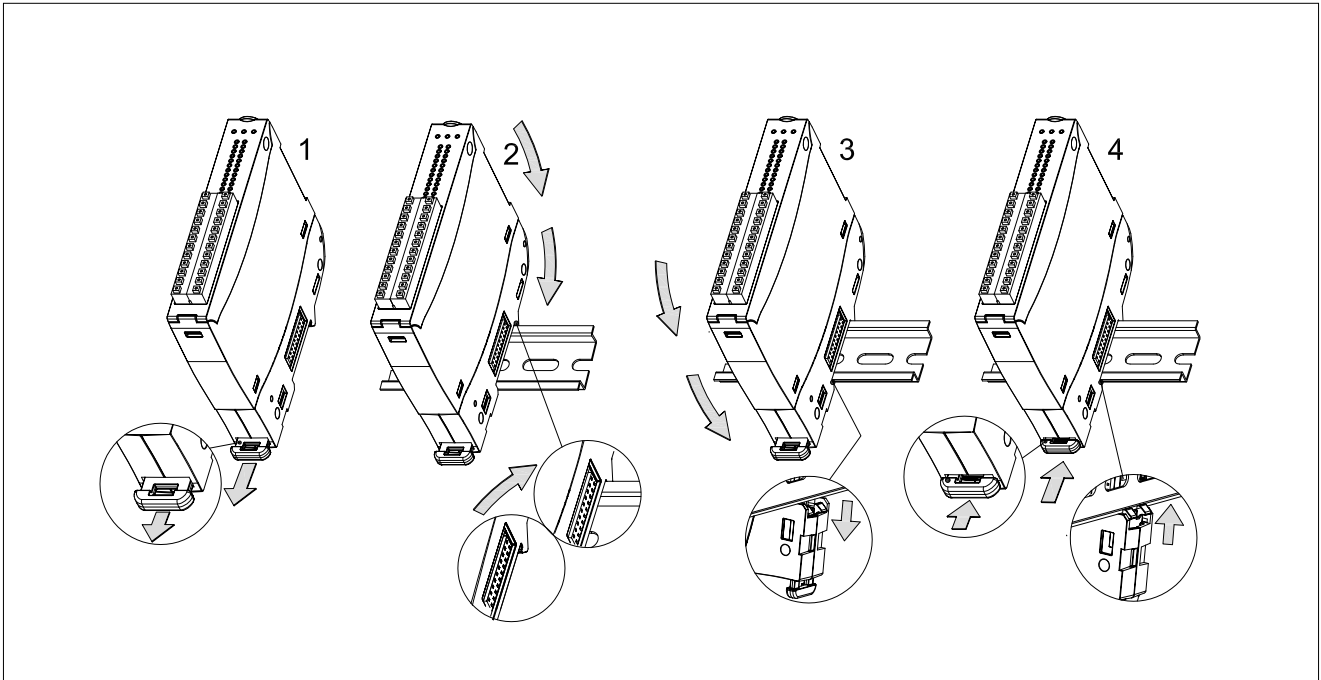

Remove the board from the DIN rail, release the lower clip using a screwdriver to lever it slightly, and turn the board to release it.


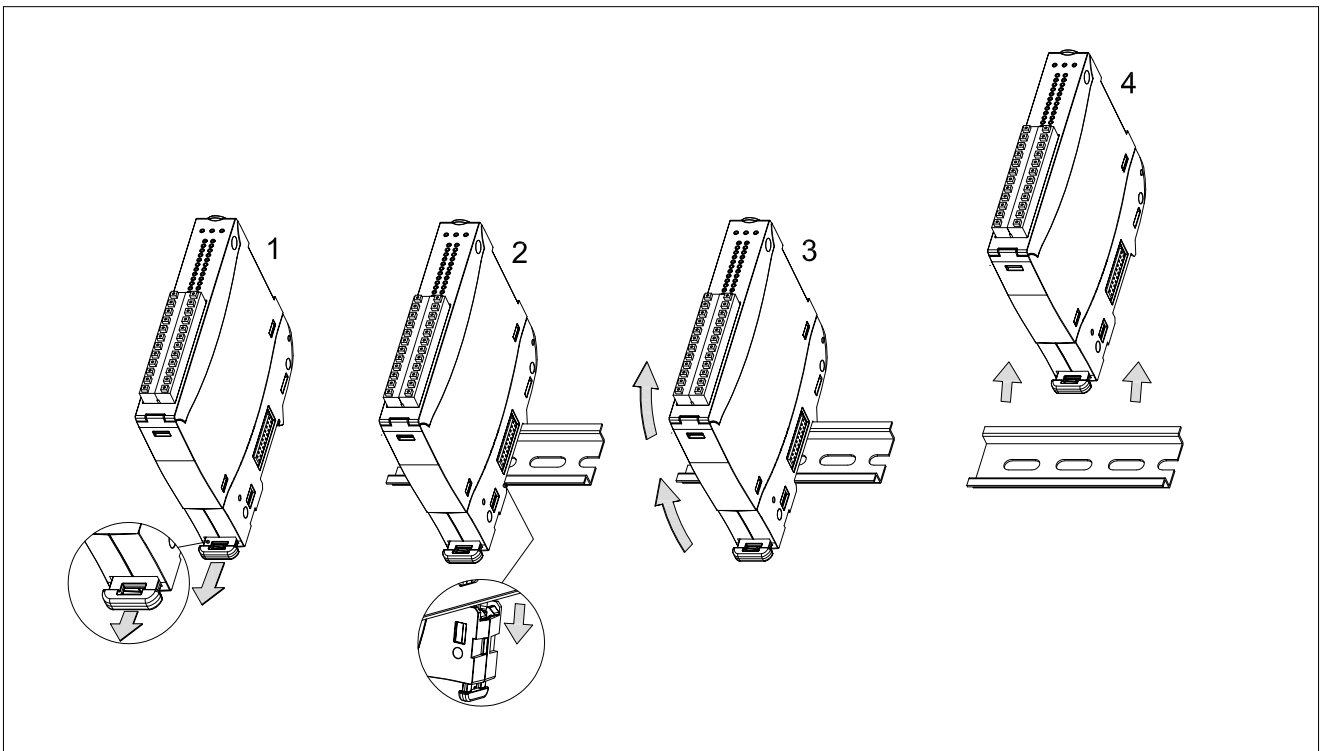


Once the board has been coupled, it is possible to secure the lower clip in the stable released position and slide it longitudinally on the rail until it is coupled to the previous board.

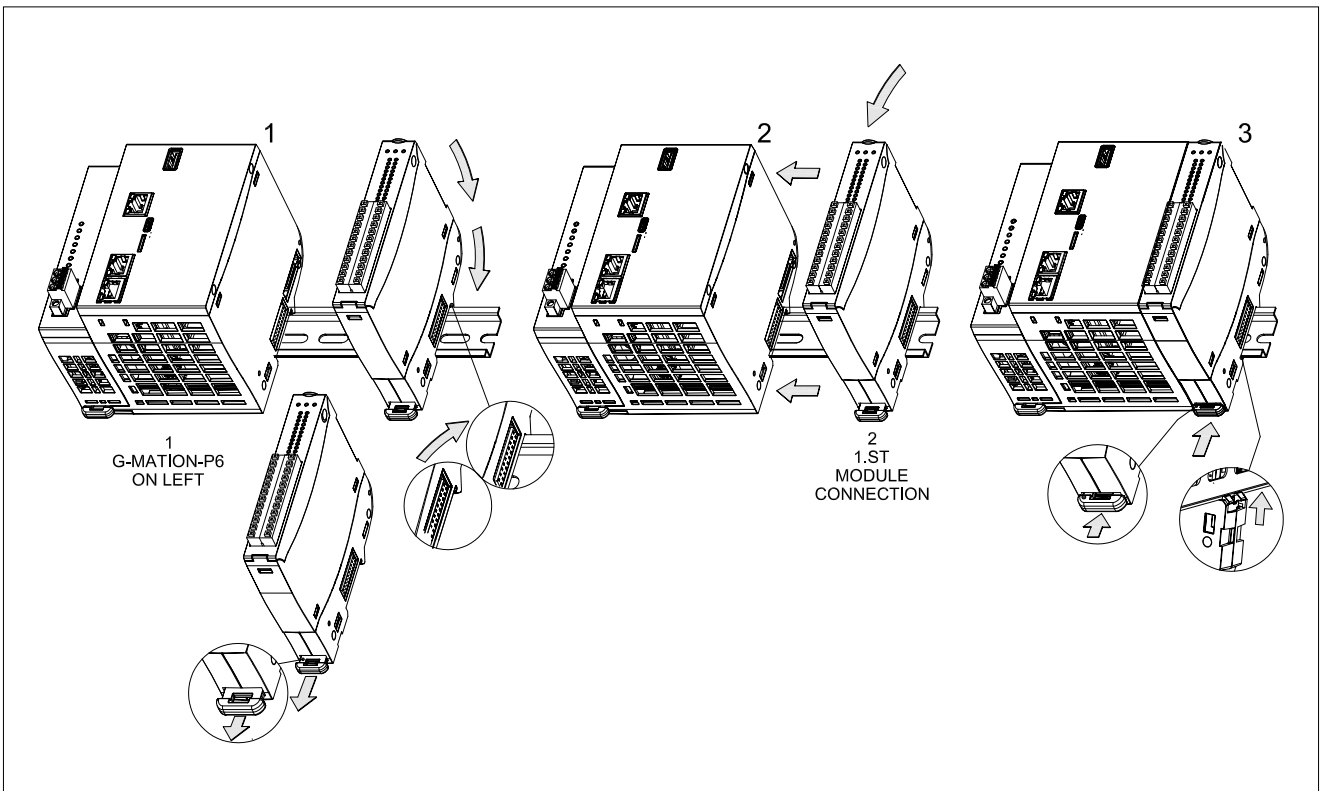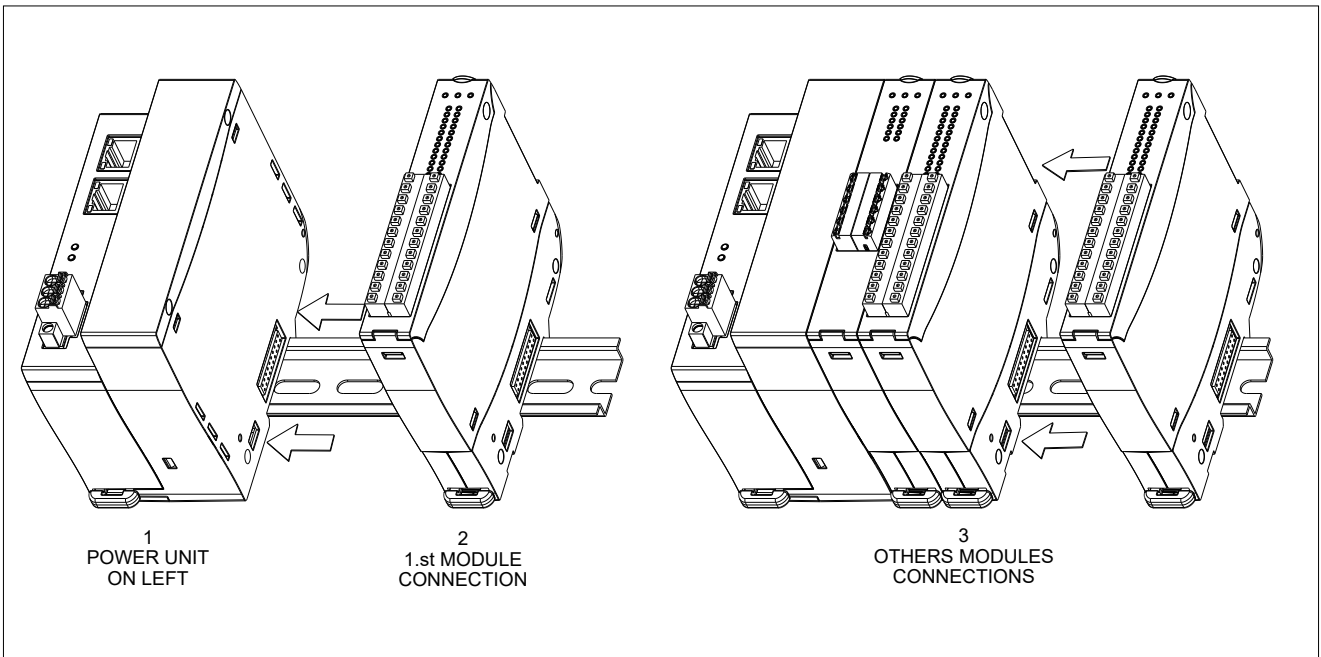


Once coupled, reinsert the lower clip so that the coupling with the DIN rail and the left board is firm and maintained by the force of the internal spring.

To release the board from the rack, use the lower clip and lock it in the stable released position. Slide the board to the right to separate it from the rack. Use the lower clip again and pull it so that you can lift the board from the din r.

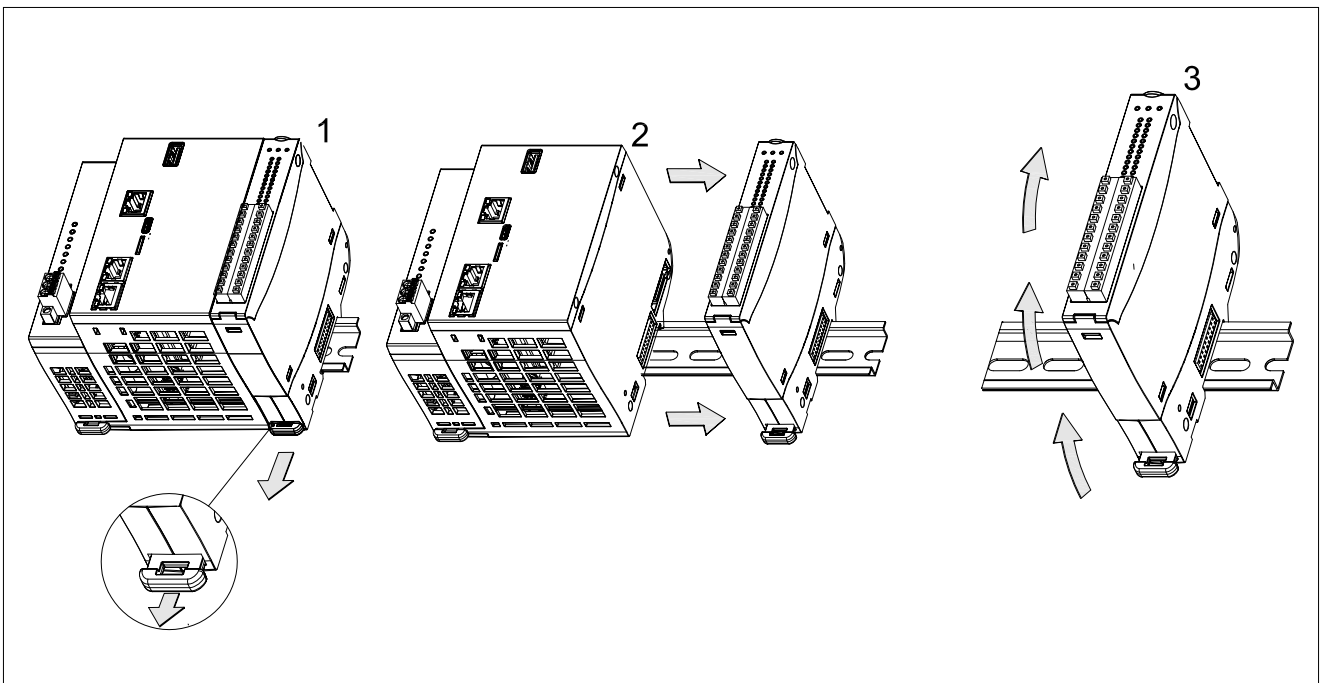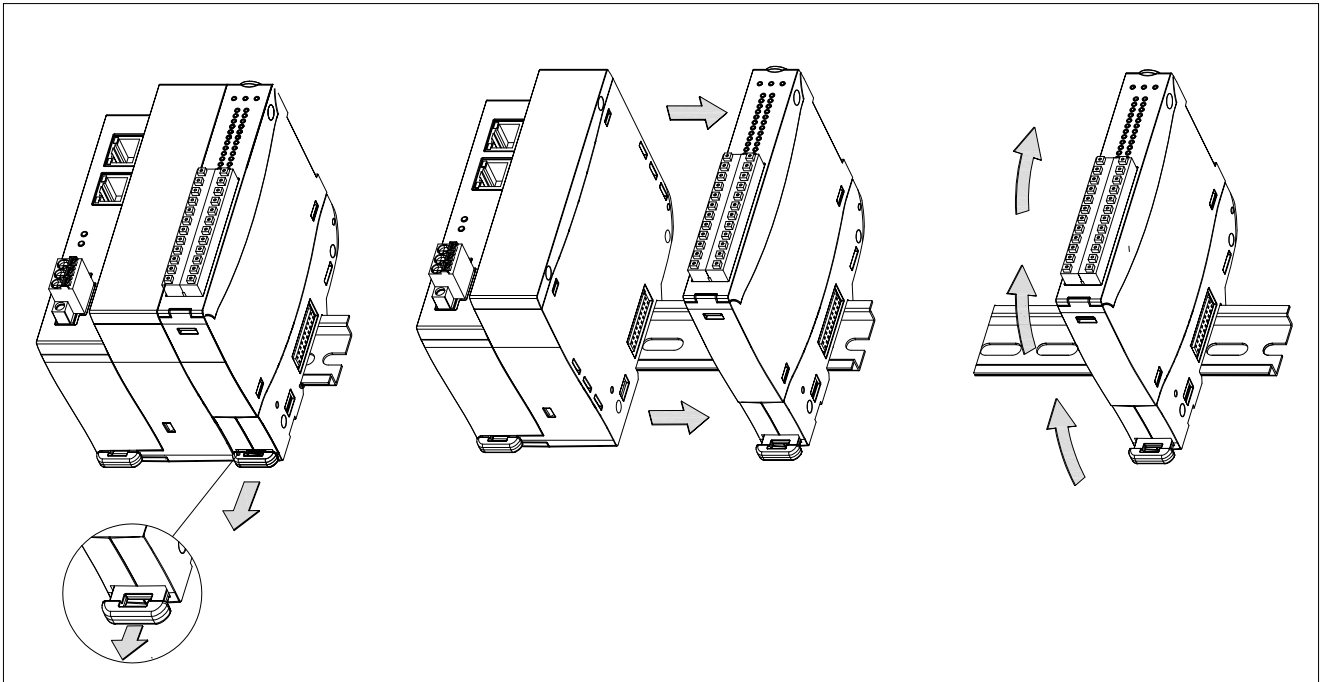

2.7. Positioning

For the installation into an electrical cabinet of a G3 I/O rack, the ventilation distances as defined in the figure must be respected underlying.

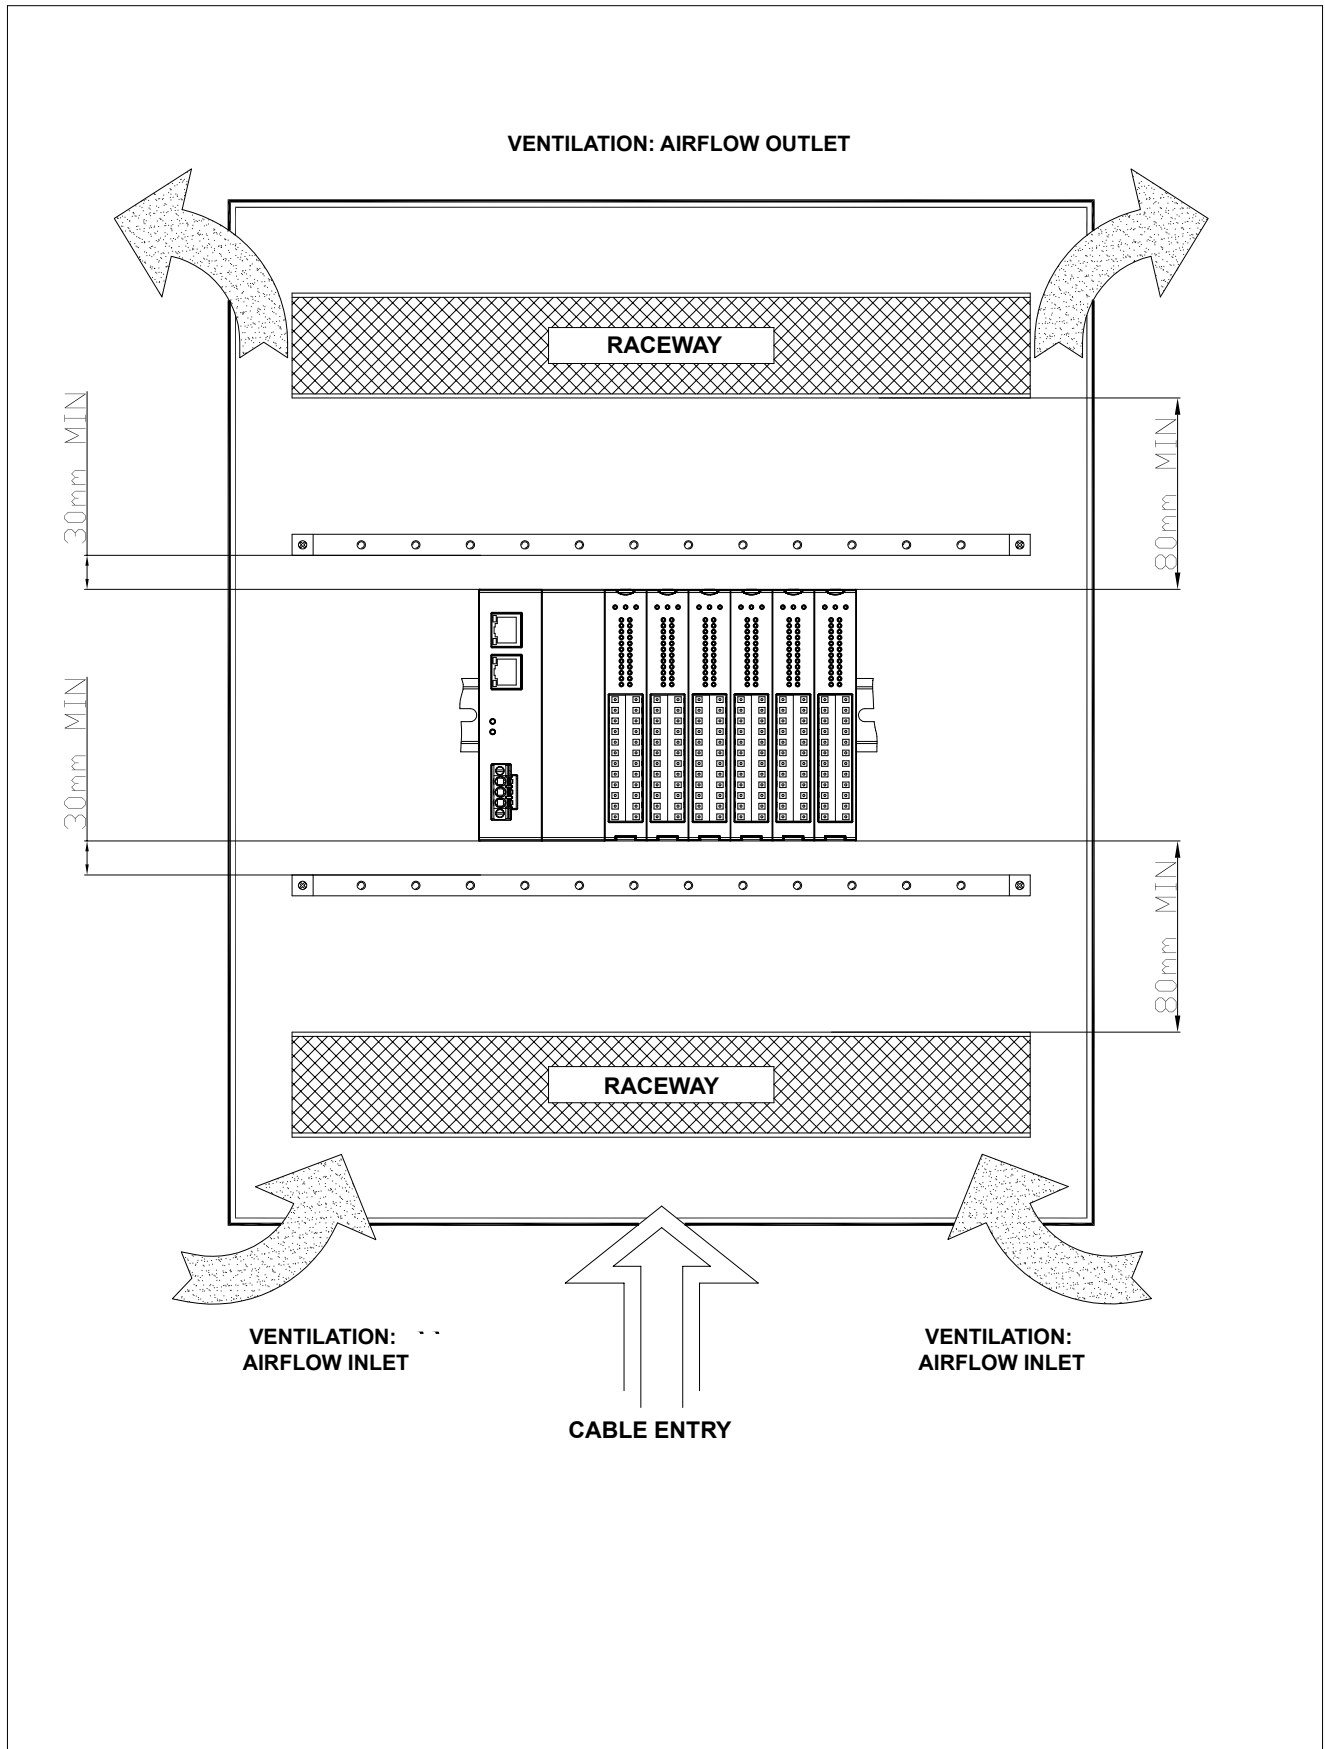

3. TECHNICAL SPECIFICATIONS

3.1. Board equipment

The **G3-U20** module has 20 optically isolated, currentsource digital outputs at 24 VDC \pm 25%, 0.5A/2A max directly power loads in VDC within the limits of rated currents, or control loads of any kind via solid state relay, contactors.

G3-U20 can be connected with all the G-Mation gateways and Px CPU modules from which it receives power supply.

The outputs are divided into 2 groups of 16 and 4 outputs, with maximum current of 8A per group.


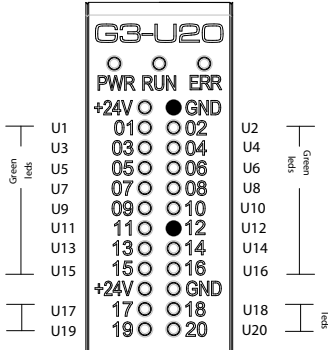
Each output is protected against short-circuit, overload and overheating.

There is an Internal demagnetization circuit for inductive loads.



TECHNICAL DATA	
Controls 20 optically isolated digital outputs	24VDC \pm 25%
Organization	2 groups of 16 outputs (1..16) and 4 outputs (17...20)
Maximum voltage of power supply	32V
Maximum current per channel	1...16 max 0.5A, Outputs 17...20 max 2A each
Maximum current for group	8A
Current protection for single output	Outputs 1...16 >0.7A, outputs 17...20 > 2.2A
Current protection for each group	Outputs 1...16 >10A, outputs 17...20 > 2.2A
Transition time	>1: 15us >0: 38us
Outputs switching frequency	250Hz
Isolation	> 1.5kV
Power supply	From G3-ECAT or Px CPU modules board for control electronics, +24V (\pm 25%) for Field Signals
Overvoltage	II
Power dissipation	1,2 W, \pm 5%
MECHANICAL DATA	
Dimensions	120x110x60 mm
Weight	150 g
Protection level	IP20 For UL: not UL evaluated. Open type device
Connectors	Front 24 pin-5.08 mm pitch removable connection system with spring wire retention, no tool required to fix or remove wires and module
Attachment	mechanically snaps onto DIN rail
ENVIRONMENTAL CONDITIONS	
Working temperature	-10...55°C
Storage temperature	-25...70°C
Humidity	max. 90% Rh not condensing
Pollution degree	2
Maximum altitude	2000 m


3.2. Meaning of LEDs

	ACRONYM	COLOR	LED STATUS	MEANING
MODULE DIAGNOSTICS 	PWR	YELLOW	OFF	no power supply
			ON	power supply present
	RUN	GREEN	OFF	INIT or BOOT status
			Blinking: 2.5 Hz (Slow blinking)	PRE-OPERATIONAL status
			Single Flash: on 200 ms off 1000 ms (Single Flash)	SAFEOP status
			Flickering: 10 Hz (Fast flickering)	BOOT status
			ON	OPERATIONAL status
	ERR	RED	OFF	no error
			Blinking (Slow blinking)	configuration error
			Single Flash:	generic runtime error
Double Flash			wdog on cyclic data	
Flickering (Fast flickering)			error during the BOOTING phase	
IOs DIAGNOSTICS: 20 digital outputs 	+24V	YELLOW	OFF	Power supply ABSENT
			ON	Power supply PRESENT
	nn (0..20)	GREEN	OFF	output not active = 0 logic
			ON	active output = 1 logic

If communication with the master is active, more information can be obtained from the objects in the module itself.

3.3. Connections

3.3.1. Front connections

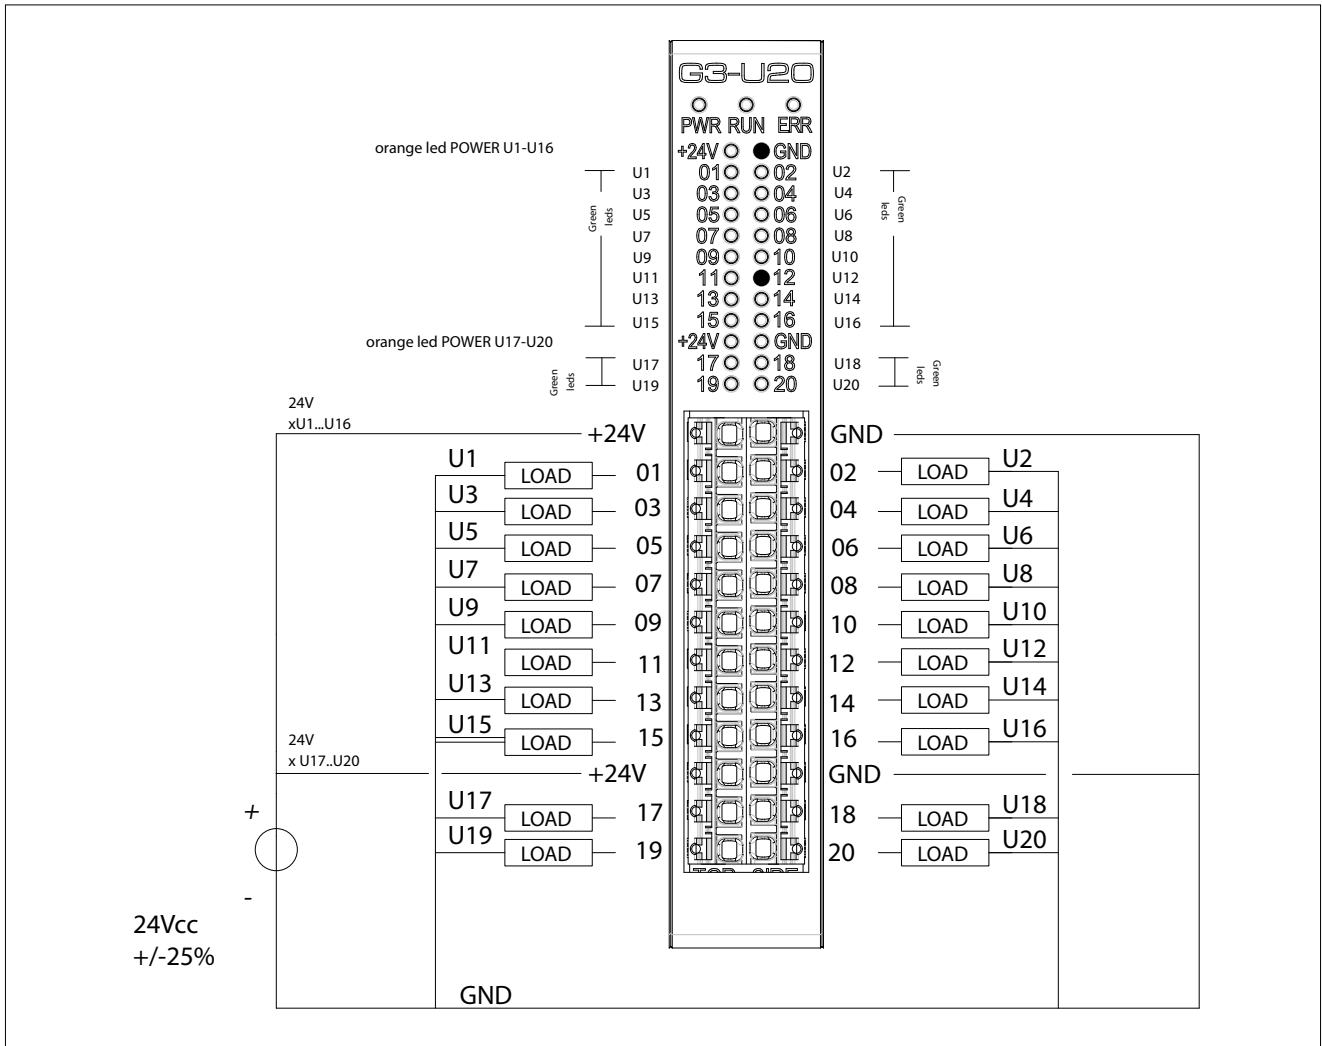

Use unipolar flexible electric wire with a section of 0.75 .. 1.50 mm² and 8 .. 9 mm strip length to wire DIGITAL OUTPUTS.

For wiring modes see paragraph “2.5. Front connector wiring” a pagina 12 of this manual.

3.4. Resource software management

G3-U20 module resources are available through the objects described below, which are provided by the EtherCAT protocol according to directive ETG 5001.

All objects are made available to the master through the ESI file called:
Gefran G3-U20 Vxx where xx is the version.

The file is available on the Gefran WEBSITE (www.gefran.com).

3.4.1. Module Objects

INDEX	SUB.	STORE	NAME	MAP	TYPE	ACCESS	DEFAULT / NOTE
0x1000	0	No	Device type	No	UDINT	RO	0x0001389 5001 TBD
0x1001	0	No	Error Register	No	USINT	RO	0x00
0x1008	0	No	Device Name	No	STRING	RO	G3-U20
0x1009	0	No	Manufacturer Hardware version	No	STRING	RO	03
0x100A	0	No	Manufacturer Software version	No	STRING	RO	1.3
0x1018	0	No	Objects number	No	USINT	RO	4
	1	No	Vendor Id	No	UDINT	RO	0x0000 0093 (Gefran)
	2	No	Product Code	No	UDINT	RO	0x00000BBC (3004)
	3	No	Revision Number	No	UDINT	RO	0x0000 0003
	4	No	Serial Number	No	UDINT	RW	32 bit product serial number

3.4.2. IOs managements

INDEX	SUB INDEX	NAME	TYPE	ACCESS	Default / Note
0x7003	0	Objects number	USINT	RO	21
	1	Digital Output Value 1	BOOL	RW	FALSE
	2	Digital Output Value 2	BOOL	RW	FALSE
	3	Digital Output Value 3	BOOL	RW	FALSE
	4	Digital Output Value 4	BOOL	RW	FALSE
	5	Digital Output Value 5	BOOL	RW	FALSE
	6	Digital Output Value 6	BOOL	RW	FALSE
	7	Digital Output Value 7	BOOL	RW	FALSE
	8	Digital Output Value 8	BOOL	RW	FALSE
	9	Digital Output Value 9	BOOL	RW	FALSE
	10	Digital Output Value 10	BOOL	RW	FALSE
	11	Digital Output Value 11	BOOL	RW	FALSE
	12	Digital Output Value 12	BOOL	RW	FALSE
	13	Digital Output Value 13	BOOL	RW	FALSE
	14	Digital Output Value 14	BOOL	RW	FALSE
	15	Digital Output Value 15	BOOL	RW	FALSE
	16	Digital Output Value 16	BOOL	RW	FALSE
	17	Digital Output Value 17	BOOL	RW	FALSE
	18	Digital Output Value 18	BOOL	RW	FALSE
	19	Digital Output Value 19	BOOL	RW	FALSE
	20	Digital Output Value 20	BOOL	RW	FALSE
	21	pad	4 bit	RW	FALSE

The logical status of outputs 1..20 is available in the object in sub-indexes 1..20

BOOL Output Type:

false: output NOT active

true: ON output

3.4.3. IOs Configuration objects

Output Status in Alarm Condition

INDEX	SUB INDEX	NAME	TYPE	ACCESS	DEFAULT / NOTE
0xA001	0	Objects number	USINT	RO	21
	1	Output Status Behaviour Value 1	BOOL	RW	FALSE
	2	Output Status Behaviour Value 2	BOOL	RW	FALSE
	3	Output Status Behaviour Value 3	BOOL	RW	FALSE
	4	Output Status Behaviour Value 4	BOOL	RW	FALSE
	5	Output Status Behaviour Value 5	BOOL	RW	FALSE
	6	Output Status Behaviour Value 6	BOOL	RW	FALSE
	7	Output Status Behaviour Value 7	BOOL	RW	FALSE
	8	Output Status Behaviour Value 8	BOOL	RW	FALSE
	9	Output Status Behaviour Value 9	BOOL	RW	FALSE
	10	Output Status Behaviour Value 10	BOOL	RW	FALSE
	11	Output Status Behaviour Value 11	BOOL	RW	FALSE
	12	Output Status Behaviour Value 12	BOOL	RW	FALSE
	13	Output Status Behaviour Value 13	BOOL	RW	FALSE
	14	Output Status Behaviour Value 14	BOOL	RW	FALSE
	15	Output Status Behaviour Value 15	BOOL	RW	FALSE
	16	Output Status Behaviour Value 16	BOOL	RW	FALSE
	17	Output Status Behaviour Value 17	BOOL	RW	FALSE
	18	Output Status Behaviour Value 18	BOOL	RW	FALSE
	19	Output Status Behaviour Value 19	BOOL	RW	FALSE
	20	Output Status Behaviour Value 20	BOOL	RW	FALSE
	21	pad	4 bit	RW	FALSE

Defines the state that output n should assume in the alarm condition, if the bit “Output Status Behaviour Enable Value x” is ON”.

BOOL Output Type:

false: output maintain its value

true: ON output forced

INDEX	SUB INDEX	NAME	TYPE	ACCESS	DEFAULT / NOTE
0xA002	0	Objects number	USINT	RO	21
	1	Output Status Behaviour Enable Value 1	BOOL	RW	FALSE
	2	Output Status Behaviour Enable Value 2	BOOL	RW	FALSE
	3	Output Status Behaviour Enable Value 3	BOOL	RW	FALSE
	4	Output Status Behaviour Enable Value 4	BOOL	RW	FALSE
	5	Output Status Behaviour Enable Value 5	BOOL	RW	FALSE
	6	Output Status Behaviour Enable Value 6	BOOL	RW	FALSE
	7	Output Status Behaviour Enable Value 7	BOOL	RW	FALSE
	8	Output Status Behaviour Enable Value 8	BOOL	RW	FALSE
	9	Output Status Behaviour Enable Value 9	BOOL	RW	FALSE
	10	Output Status Behaviour Enable Value 10	BOOL	RW	FALSE
	11	Output Status Behaviour Enable Value 11	BOOL	RW	FALSE
	12	Output Status Behaviour Enable Value 12	BOOL	RW	FALSE
	13	Output Status Behaviour Enable Value 13	BOOL	RW	FALSE
	14	Output Status Behaviour Enable Value 14	BOOL	RW	FALSE
	15	Output Status Behaviour Enable Value 15	BOOL	RW	FALSE
	16	Output Status Behaviour Enable Value 16	BOOL	RW	FALSE
	17	Output Status Behaviour Enable Value 17	BOOL	RW	FALSE
	18	Output Status Behaviour Enable Value 18	BOOL	RW	FALSE
	19	Output Status Behaviour Enable Value 19	BOOL	RW	FALSE
	20	Output Status Behaviour Enable Value 20	BOOL	RW	FALSE
	21	pad	4 bit	RW	FALSE

The output status selector in alarm condition defines whether the output is in the NO state in the alarm condition ON, or if it should follow the settings of the 0xA001 object.

Output Status Selector Type in **BOOL Alarm** :

false: the output is switched to the NOT ACTIVATED condition

true: The output moves to the condition as specified in the object

0xA001: Value of the output in the state of alarm

3.4.4. Control objects

INDEX	SUB.	STORE	NAME	MAP	TYPE	ACCESS	DEFAULT / NOTE
0x9000	0	No	Device Code	No	UINT	RO	0x0BBC
0x9001	0	No	Hardware Version	No	UINT	RW	0x03
0x9002	0	No	Firmware Revision	No	UINT	RO	0x0130
0x9003	0	No	Serial Number	No	UDINT	RW	0x00000000
0x9004	0	No	Order Code	No	STRING(7)	RO	F092602

3.5. Alarm Management

INDEX	SUB INDEX	NAME	TYPE	ACCESS	Default / Note
0xA000	0	Objects number	USINT	RO	23
	1	Alarm Status Channel 1	BOOL	RW	FALSE
	2	Alarm Status Channel 2	BOOL	RW	FALSE
	3	Alarm Status Channel 3	BOOL	RW	FALSE
	4	Alarm Status Channel 4	BOOL	RW	FALSE
	5	Alarm Status Channel 5	BOOL	RW	FALSE
	6	Alarm Status Channel 6	BOOL	RW	FALSE
	7	Alarm Status Channel 7	BOOL	RW	FALSE
	8	Alarm Status Channel 8	BOOL	RW	FALSE
	9	Alarm Status Channel 9	BOOL	RW	FALSE
	10	Alarm Status Channel 10	BOOL	RW	FALSE
	11	Alarm Status Channel 11	BOOL	RW	FALSE
	12	Alarm Status Channel 12	BOOL	RW	FALSE
	13	Alarm Status Channel 13	BOOL	RW	FALSE
	14	Alarm Status Channel 14	BOOL	RW	FALSE
	15	Alarm Status Channel 15	BOOL	RW	FALSE
	16	Alarm Status Channel 16	BOOL	RW	FALSE
	17	Alarm Status Channel 17	BOOL	RW	FALSE
	18	Alarm Status Channel 18	BOOL	RW	FALSE
	19	Alarm Status Channel 19	BOOL	RW	FALSE
	20	Alarm Status Channel 20	BOOL	RW	FALSE
	21	Alarm Status SC 1	BOOL	RW	FALSE
	22	Alarm Status SC 2	BOOL	RW	FALSE
	23	pad	4 bit	RW	FALSE

Output Status indicates whether or not the output is in alarm. The alarm status of outputs 1..20 is available in the object in sub-indexes 1..20

Output Status Selector Type: **BOOL**

false: output NOT in alarm

true: shortcircuit alarm output

Output Status **SC** indicates whether or not the relevant output group is alarmed with:

SC1: group of 16 outputs

SC2: group of 4 outputs

The alarm status of group 1..2 is available in the object in sub-indexes 21..22 SC

Output Status Selector Type: **BOOL**

false: output group NOT in alarm


true: Output group in alarm

4. ACRONYM AND ORDER CODE

COMPLETE MODULE	G3-U20	F092702
Front	G3-U20 F	F092616
Electronic module	G3-U20 E	F092602
Bus	G3-BUS	F092614


5. MARKING

Every module contain the datas of every module part and the full module.

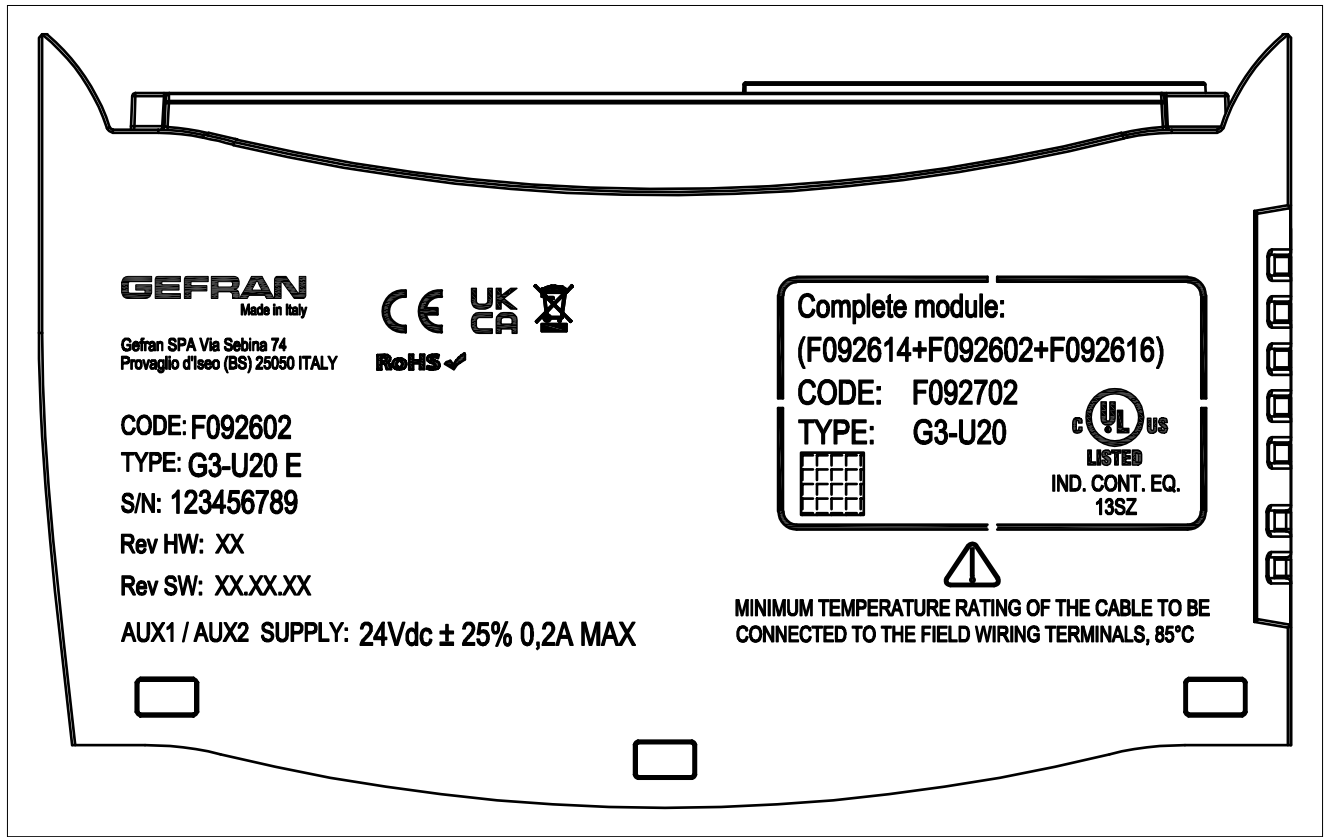

The following information may be found on the label:

- CODE: product code
- S/N: product serial number
- TYPE: product name / description
- HW: hardware version 1 .. 99
- GEFRAN logo
- certifications
- logo specifying product disposal

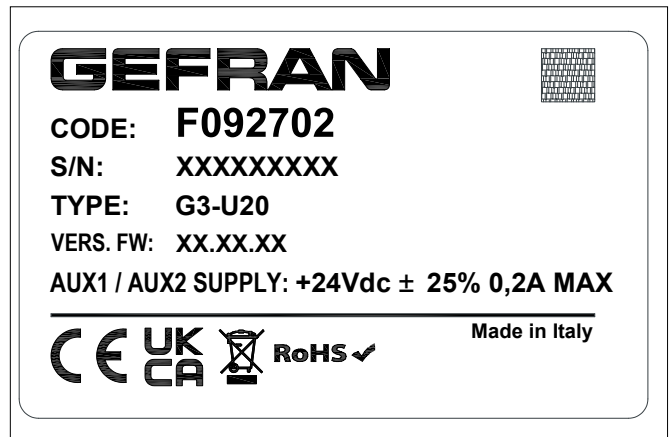

This symbol present on the product label stands for further indications on product manual. For correct and sale installation, follow the instructions and observe the warnings contained in this manual. No hazards shall arise by any reasonably foreseeable misuse in a way not intended, and not described in this manual. The complete manual is available for download from the website www.gefran.com. UL file number E-198546.

Certifications

	This device conforms to European Union Directive 2014/30/EU and 2014/35/EU as amended with reference to generic standards: EN 61000-6-2 (immunity in industrial environment) EN 61000-6-4 (emission in industrial environment) - EN 61010-1 (safety regulations).
	cULus listed, Conformity UL61010-1 - File: E198546

6. SMALTIMENTO



Il prodotto va smaltito seguendo le normative in vigore.

Alcuni dei componenti usati nei dispositivi se non correttamente smaltiti possono causare danni all'ambiente.

Ai sensi dell'art. 26 del Decreto Legislativo 14 marzo 2014, n.49 "Attuazione della direttiva 2012/19/UE sui rifiuti di apparecchiature elettriche ed elettroniche (RAEE)".

Il simbolo del cassonetto barrato riportato sull'apparecchiatura o sulla sua confezione indica che il prodotto alla fine della propria vita utile deve essere raccolto separatamente dagli altri rifiuti.

L'adeguata raccolta differenziata per l'avvio successivo dell'apparecchiatura dismessa al riciclaggio, al trattamento e allo smaltimento ambientalmente compatibile contribuisce ad evitare possibili effetti negativi sull'ambiente e sulla salute e favorisce il reimpiego e/o riciclo dei materiali di cui è composta l'apparecchiatura.

GEFRAN