

Euro gauge

Bimetal temperature

T150

EAC



Contents

1. General items	2
1.1 Introduction	2
1.2 Application	2
1.3 Product characteristics	2
1.4 Warranty	2
2. Warning	3
3. Main specs	4
3.1 Protection grade	4
3.2 Basic specs.....	4
4. Design	5
4.1 Structure	5
4.2 Principle of operation	5
5. Installation guide	6
5.1 Pre-installation checks and precautions	6
5.2 Matters of caution for installation	6
6. Repair and maintenance	8
7. Defect	9
8. User's duties	9
9. Product return	9

1. General items

1.1 Introduction

The T150 model manufactured by Wise Co., Ltd. is a thermometer produced using bimetal according to the EN 13190 standard. These thermometers are the most widely used for general industrial applications, and can measure temperatures immediately upon installation on site. The product must be tested and stored under appropriate conditions, and the requirements in various documentation, test reports and user manuals must be observed to maintain optimal use condition.

1.2 Application

The product can be used to indicate temperatures for process control and determining temperatures inside pipes to ensure stable operation. Additionally, it can be manufactured in a liquid-filled type according to customer requirements. This is to prevent damage to internal components due to severe vibration, reduce pointer shake, and exclude surrounding corrosion.

1.3 Product characteristics

- 1) Typical measuring range is -50°C to 600°C. Sustained use outside this temperature range should be avoided, and accuracy is around $\pm 2\%$.
- 2) The accuracy of the thermometer varies according to the surrounding environment, method of installation, accuracy of calibration, and bimetal characteristics.
- 3) Response speed also varies according to thermometer design and use conditions.
- 4) A simple structure allows for easy repairs and minimizes aging.

1.4 Warranty

If one causes damage to the product due to failures to comply with the user manual, or if one arbitrarily remodels it, changes or repairs the product, the manufacturer will not be responsible for it, and the product warranty period will expire.

2. Warning

Guide on handling for safe use

For the safe and correct use of the product, make sure to read the handling guide carefully before use. Handling errors can cause device malfunctions, and it can lead to injury, accidents, etc.

Warning

- 1) For the safety, only a worker with professional skills in electronics and electrical construction is allowed to install the product.
- 2) Make sure to use the product within the rated input/output range set in the specifications
- 3) Install the product in the environment of use indicated in the specifications.
- 4) Use the product in the permissible temperature range.
- 5) Do not apply excessive loads, vibrations, or impacts.
- 6) Be careful not to bend the sensing part of the thermometer. If the sensing part is bent, it will interfere with the normal operation of the thermometer and cause temperature deviation.
- 7) Do not grab the head and turn it. Using a tool, hold the hexagonal screw parts to turn it.
- 8) O-ring can cause changes over time or characteristics change, and it can lead to a loss of necessary functions for sealing, thus it requires periodic replacement, and in general, it is recommended to replace it every 5 years.
- 9) When installing on site, be sure to install according to the installation instructions in the manual.
- 10) Do not convert or modify the product to add new features.

3. Main specs

3.1 Protection grade


- EN60529 / IEC529 / IP67

3.2 Basic specs

- 1) Nominal outer diameter : 75, 100, 125, 150 mm
- 2) Indicator precision: $\pm 2.0\%$ (or $\pm 1.0\%$) of Full scale.
- 3) Working temperature :
Normal (1 year)(Measuring range) : $-60 \sim 500^{\circ}\text{C}$
Short time (24 hours)(Scale range) : $-70 \sim 600^{\circ}\text{C}$
- 4) Ambient temperature : $-20 \sim 60^{\circ}\text{C}$
- 5) Fluid temperature when filled with liquid: up to 100°C (glycerin filled type)
only mounting type : Bottom connection, direct (Dial size: 100, 160 mm)
- 6) Material of sensing part: 304SS, 316SS
- 7) Connection specification: $3/8"$, $1/2"$, $3/4"$ PT or NPT
- 8) Element : Bimetal


4. Design

4.1 Structure

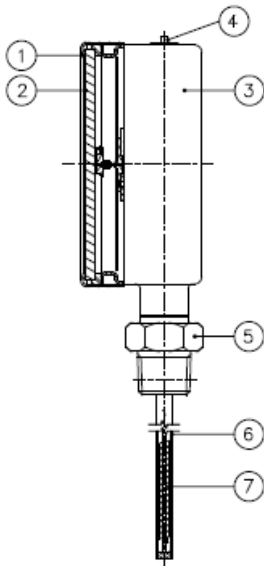

No.	Description
1	Cover
2	Window
3	Case
4	Oil cap
5	Gauge connection
6	Stem or Bulb
7	Element (Bimetal)

Type of mounting : Bottom connection, direct


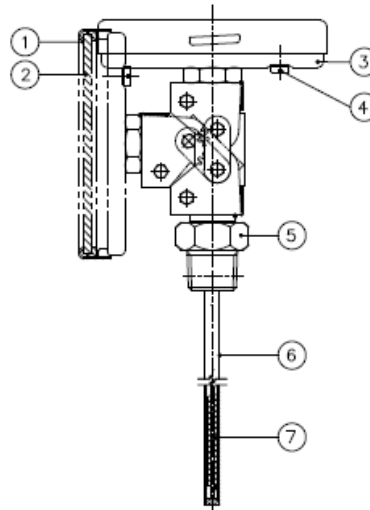


No.	Description
1	Cover
2	Window
3	Case
4	Zero adjustment
5	Gauge connection
6	Stem or Bulb
7	Element (Bimetal)

Type of mounting : Center back with adjustable stem

4.2 Principle of operation

A bimetal strip is a rod-shaped component where two thin sheets of metals with different thermal expansion coefficients are joined by welding. The difference between expansion of the coils depending on temperature is used to measure temperature. The degree to which the coil is twisted is converted into temperature. Coil type thermometers are used for industrial temperature measurement.

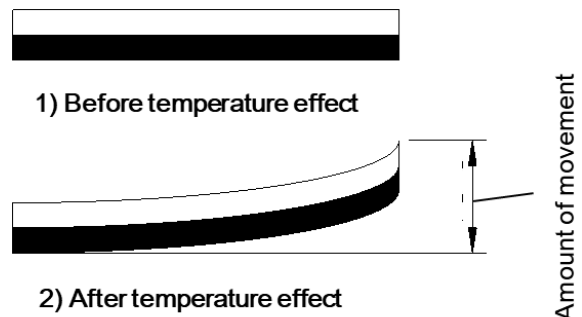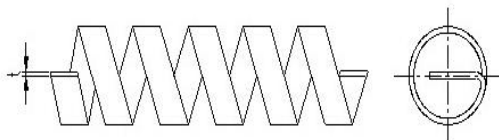


5. Installation guide

5.1 Pre-installation checks and precautions

- 1) Handle with care during transport, as impact due to dropping may cause damage to performance.
- 2) Store in locations with low humidity and without dust or vibration. When stacking, weight should be limited to prevent deformation of the packaging boxes. Boxes should be stacked to prevent toppling over.
- 3) Open packaging carefully.
- 4) Check the product for damage and check process conditions before installing the product.

5.2 Matters of caution for installation

- 1) Temperature differentials are caused by the insertion depth of the sensor. For accurate temperature measurement, the entire sensor of the thermometer must be inserted.

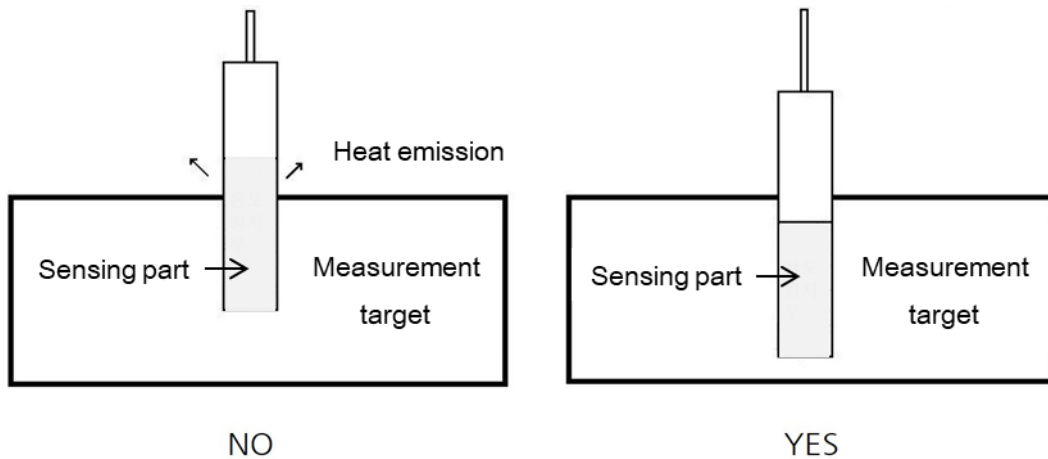


- 2) The product is sensitive to vibration and impact.
- 3) If the installation location is subject to vibration or mechanical impact, install the thermometer a safe distance away.
- 4) Use of a thermowell is recommended for safe use and maintenance.

- 5) Fasten securely using tools such as a spanner.



- 6) Holding and turning the thermometer case at installation may cause defects.

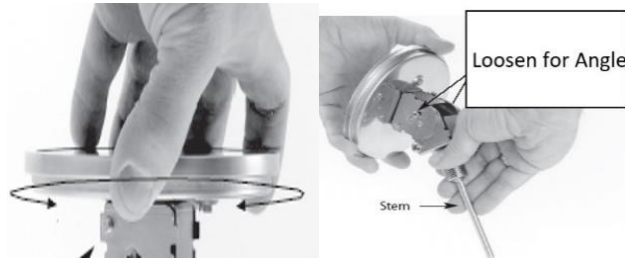

- 7) The bolt under the case must be loosened to adjust the direction of the indicator unit of the thermometer. Once the bolt is loosened, the indicator can be adjusted to the desired angle.
- 8) Periodically inspect the installation location for moisture, vibration, dust, corrosive gas.
- 9) Avoid areas that might exceed the temperature ranges specified in this manual.
- 10) Make sure to protect from lightning or steam.
- 11) Avoid areas with direct sun light.

■ Precautions for liquid-filled type thermometers


- 1) For liquid filled thermometers, it is common to use glycerin or silicone filled liquid. However, these fluids may not be suitable for all applications. This work should be avoided in areas containing strong oxidizing agents, including but not limited to oxygen, chlorine, nitric acid, and hydrogen peroxide.
- 2) Liquid filled thermometers may not be available in all ranges due to temperature effects on the fill material. Liquid-filled bimetal thermometers are completely filled with fluid, including the stem and case, so the filled portion is exposed to process temperatures. As temperatures rise, not only will the filling expand, increasing the pressure inside the case, but continued exposure to extreme temperatures can also deteriorate its quality.

6. Repair and maintenance

- 1) The working temperature shall be below 75% of the max graduation.
- 2) Never apply temperatures that exceed the temperature range.
- 3) Please avoid a dramatic change of temperature.
- 4) Check the pipeline for vibration and pulsation, and check the ambient temperature. As needed, a filled system type thermometer using capillary tubes may be used.
- 5) Please regularly check the product for normal operation once or twice every 6 months.
- 6) If the indicator error is large, please disassemble and inspect the product.

■ For liquid-filled type thermometers

- 1) Do not cut the oil filler cap when installing outdoors, and release the internal pressure regularly.
- 2) In rainy weather, moisture may enter.
- 3) If it is unavoidable, do not cut the oil filler cap completely, but only cut half of it as shown in the picture.

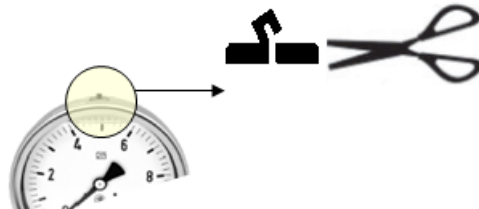

- 4) When replenishing due to insufficient oil, obtain the used oil or ingredients from the manufacturer and refill with the most similar oil. The liquid-filled type fills the case with liquid such as glycerin or silicone oil to more than 75% of the total volume. However, be careful not to fill it 100%.



Dial Size	Oil injection amount
100	About 240~265 ml
160	About 630~695 ml

Please refer to the oil dosage table as 75% of the case volume with a margin of 10%.

It may vary depending on the characteristics of the product. Please refer to the attached photos and visually check and supplement if necessary. For other precautions, please refer to Section 5.2, "Precautions for Liquid-Filled Thermometers."

7. Defect

- 1) If the indicator needle shakes, please check for the following.
→ Loose fastening of connection, worn connection, vibration near the installation location.
- 2) If vibration is severe, change the installation location or use a filled system type thermometer.
- 3) If the temperature indicated by the needle differs from the actual temperature, adjust using the zero point adjustment device on the rear face of the thermometer.
- 4) If the matter cannot be resolved using the zero point adjustment device, please inquire with the manufacturer.

8. User's duties

Temperature sensor products are used in high temperatures and corrosive environments. The right product must be selected based on various safety considerations. For all temperature sensors designs, proper installation is the most important.

Incorrect installation can eventually lead to an inaccurate reading of temperature.

Wise Co., Ltd. can support users' selection but will not be responsible for them in any sort of way.

9. Product return

- 1) If the product gets returned for recalibration or repair work, make sure to use the original packaging or safe packaging method, and also make sure to return the related documents.
- 2) Make sure to prevent exposures of the product to dust, wetness, or other sources of pollution during the conveyance.
- 3) Pack it properly to prevent vibration or any kind of impact during the conveyance.
- 4) If the product gets damaged during the conveyance, make sure to record it on paper, and if there is some kind of loss due to a delayed installation, one may demand compensation from the conveyance company.

The content of the user manual is prepared with the best efforts, but it might contain typos, or errors requiring fixes, so we kindly ask for understanding. The product spec or exterior can be changed without a pre-notice for the quality improvement purposes, thus Wise Co., Ltd. has the rights to change them. Figures used in the user manual are for just illustration purposes, and they can differ from the actual shapes

Yongin Factory

2022 Deogyong-daero, Giheung-gu, Yongin-si, Gyeonggi-do (Sanggal-dong)

www.wisecontrol.com



A/S related Inquiries

2022 Deogyong-daero, Giheung-gu, Yongin-si, Gyeonggi-do (Sanggal-dong)

webmaster@wisecontrol.com

Home page: Service center>Technology/Quote Inquiry



Wise Co., Ltd. Seoul Office

181, Gasan digital 1-ro, Geumcheon-gu, Seoul (Gasan-dong, Gasan W CENTER) F19

T. 02-300-2300

F. 02-300-2400

Euro gauge Bimetal thermometer

T150

ERC



목차

1. 일반사항.....	2
1.1 소개.....	2
1.2 적용.....	2
1.3 특징.....	2
1.4 보증.....	2
2. 경고.....	3
3. 주요 사양.....	4
3.1 보호 등급.....	4
3.2 기본 사양.....	4
4. 설계.....	5
4.1 구조.....	5
4.2 원리.....	5
5. 설치 지침.....	6
5.1 설치 전 주의사항.....	6
5.2 설치 시 주의사항.....	6
6. 유지 보수.....	8
7. 결함.....	9
8. 사용자 의무.....	9
9. 제품의 반환.....	9

1. 일반사항

1.1 소개

(주)와이즈에서 제작하는 T150 모델은 EN 13190 규격에 따라 바이메탈을 이용하여 생산되는 온도계로 현장 설치 시 즉시 온도를 측정할 수 있으며 일반적인 산업 현장에 가장 많이 사용되고 있는 온도계입니다. 본 제품은 적절한 장소에서 시험 및 보관이 이루어져야 하며, 사용기간 동안 최적의 사용 상태를 유지하기 위하여 각종 문서, 시험성적서 및 사용설명서 등의 필요조건을 반드시 지켜야 합니다.

1.2 적용

본 제품은 설정된 온도를 지시함으로써 프로세스 제어 및 배관 내의 온도를 파악하고 보다 더 안정된 운전을 행하기 위한 목적으로 사용할 수 있습니다. 또한 고객의 요구사항에 맞춰 액체 충전 타입으로 제작할 수 있습니다. 이는 심한 진동으로 인한 내부 부품의 손상을 방지하고, 포인터 흔들림을 감소시키며, 주변 부식을 배제하기 위한 목적입니다.

1.3 특징

- 1) 측정 범위는 -50°C 에서 600°C 의 온도 범위에서 많이 사용되며, 이상의 온도에서 계속되는 사용은 피해야 하며, 그 정확도는 약 $\pm 2\%$ 정도입니다.
- 2) 온도계의 정확도는 주위 환경, 설치 방법, 교정의 정확도, 바이메탈의 특성에 의해 달라집니다.
- 3) 응답 속도 또한 온도계 설계 및 사용 조건에 따라 달라집니다.
- 4) 구조가 간단하며 보수가 쉽고 경년변화도 적습니다.

1.4 보증

본 제품을 사용하실 때 사용설명서의 규정에 따르지 않아 발생하는 파손이나 임의 개조 및 변경, 수리 시에는 제조사에서 책임을 지지 않으며 제품의 보증기간은 종료됩니다.

2. 경고

안전한 사용을 위한 취급설명서

이 제품을 바르고 안전하게 사용하기 위하여 사용 전에 이 취급설명서를 잘 읽어주시기 바랍니다.
취급 시의 오류는 기기 고장의 원인이 되며, 상해나 사고 등의 재해가 발생할 수 있습니다.

경 고

- 1) 안전을 위해 설치하는 계장, 전기공사 등의 전문기술을 보유한 작업자가 실시하여야 합니다.
- 2) 사양서에 정해져 있는 정격 입출력사양의 범위 내에서 사용하십시오.
- 3) 본 제품은 사양서에 명시되어 있는 사용 환경에 설치하십시오.
- 4) 사용 가능한 온도 범위 내에서 사용하십시오.
- 5) 무리한 하중, 진동, 충격을 가하지 마십시오.
- 6) 온도계의 감지부가 휘어지지 않도록 주의하십시오. 감지부가 휘면 온도계의 정상적인 작동을 방해하므로 온도 편차의 원인이 됩니다.
- 7) 본 제품의 헤드를 잡고 돌리지 마십시오. 공구를 사용하여 나사 육각부위를 잡고 돌리십시오.
- 8) 경년 변화 및 시간에 따른 변화를 가져오는 오링은 실링에 필요한 기능을 상실할 수 있으므로 정기적인 교체가 필요하고 통상적으로 5년 주기로 교체하는 것이 적합합니다.
- 9) 현장 설치 시 반드시 사용설명서의 설치 요령에 따라 설치하여 주십시오.
- 10) 제품 자체의 개조 또는 새로운 기능을 추가하기 위한 개조 등은 하지 마십시오.

3. 주요 사양

3.1 보호 등급


- EN60529 / IEC529 / IP67

3.2 기본 사양

- 1) 공칭 외경 : 80, 100, 160 mm
- 2) 지시계 정밀도 : $\pm 2.0\%$ (또는 $\pm 1.0\%$) of Full Scale
- 3) 사용 온도 범위
일반(1년)(측정범위) : $-60 \sim 500^{\circ}\text{C}$
단시간(24시간)(눈금 범위) : $-70 \sim 600^{\circ}\text{C}$
- 4) 주의 온도 : $-20 \sim 60^{\circ}\text{C}$
- 5) 액체 충전시 유체 온도 : 최대. 100°C (글리세린 충전 타입)
only mounting type : Bottom connection, direct (Dial size: 100, 160 mm)
- 6) 감지부 재질 : 304SS, 316SS
- 7) 접속부 규격 : 3/8", 1/2", 3/4" PT or NPT
- 8) 소자 : 바이메탈


4. 설계

4.1 구조

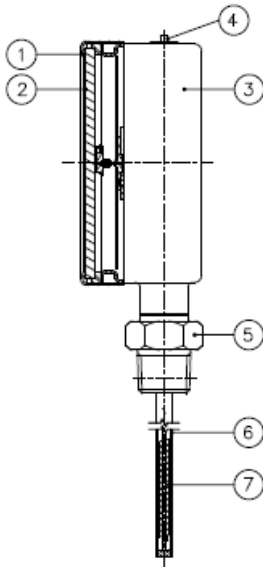

No.	Description
1	Cover
2	Window
3	Case
4	Oil cap
5	Gauge connection
6	Stem or Bulb
7	Element (Bimetal)

Type of mounting : Bottom connection, direct


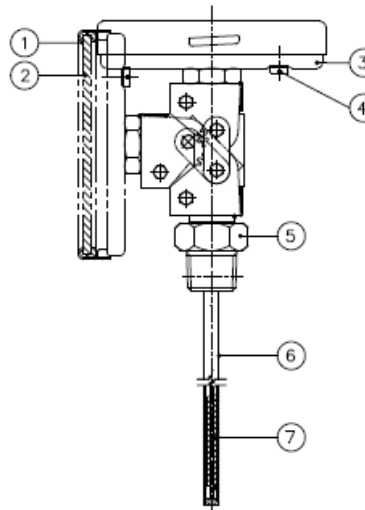


No.	Description
1	Cover
2	Window
3	Case
4	Zero adjustment
5	Gauge connection
6	Stem or Bulb
7	Element (Bimetal)

Type of mounting : Center back with adjustable stem

4.2 원리

바이메탈은 열팽창 계수가 다른 두 종류의 얇은 금속판을 포개어 용접으로 붙여 한 장으로 만든 막대 형태의 부품입니다. 코일이 온도에 따라 팽창 정도가 다른 원리를 응용하여 온도를 측정하는 방식이며 나선형 형태로 온도에 따라 나선의 뒤틀림 정도를 온도로 환산하는 방식입니다. 나선형은 산업용의 온도 측정용으로 사용되고 있습니다.

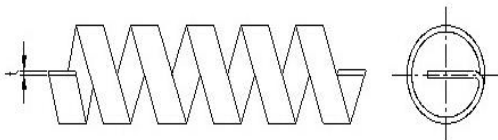

1) 온도 영향 받기 전



2) 온도 영향 받은 후


5. 설치 지침

5.1 설치 전 주의사항

- 1) 떨어뜨려 충격을 가했을 경우, 성능상 손상을 입을 경우가 있으므로 운반에 충분한 주의를 기울여야 합니다.
- 2) 습기 적은 장소, 진동 및 먼지가 없는 장소를 선별하여 보관해야 합니다. 이중 적재 시에는 포장 상자가 변형되지 않을 정도의 무게여야 하며, 항상 떨어지지 않도록 보관해야 합니다.
- 3) 포장을 개봉할 경우 취급에 주의해야 합니다.
- 4) 제품의 설치 전 손상 여부와 프로세스 상태를 반드시 확인해야 합니다.

5.2 설치 시 주의사항

- 1) 감지부의 삽입 깊이에 따라 온도 편차가 발생하기 때문에, 정확한 온도측정을 위해서는 온도계 감지부 전체를 삽입해야 합니다

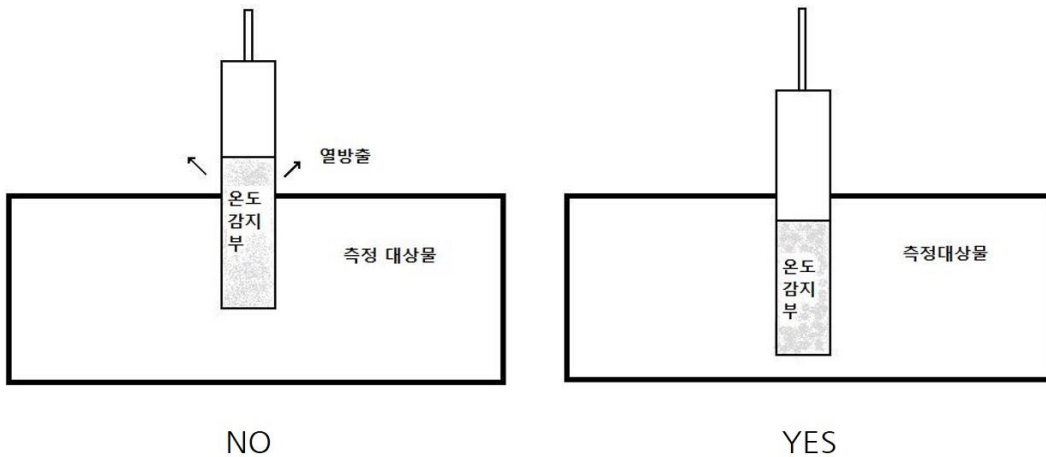


- 2) 본 제품은 진동과 충격에 민감한 제품입니다.
- 3) 만약 설치 장소에 진동과 기계적 충격의 영향이 있다면 반드시 다소 멀리 떨어진 장소에 설치하여 사용해야 합니다.
- 4) 안전한 사용과 유지 보수를 위해서는 써모웰을 사용할 것을 권장합니다.

- 5) 스패너 등의 공구를 이용하여 단단히 체결해 주시기 바랍니다.



- 6) 설치 시 온도계의 케이스를 잡고 돌리면 불량 원인이 됩니다. 내부 부름관이 꼬이지 않도록 하시기 바랍니다.

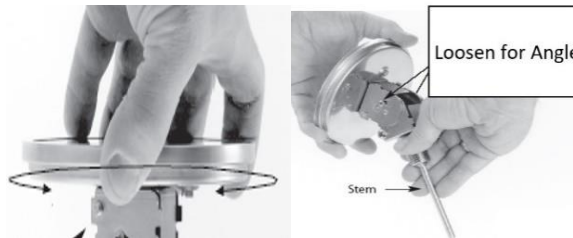

- 7) 온도계 지시부의 방향을 조절하기 위해서는 케이스 아래 볼트를 풀어야 쉽게 구부러지며 원하는 각도로 조절할 수 있습니다.
- 8) 설치된 장소는 습기, 진동, 먼지, 부식성 가스 등을 정기적으로 점검하시기 바랍니다.
- 9) 본 사용설명서에 규정한 주위 온도를 초과하는 장소를 피하여 주십시오.
- 10) 낙뢰나 증기를 막도록 충분한 대비를 하시기 바랍니다.
- 11) 직사광선이 있는 장소를 피하여 주십시오.

■ 액체 충전 타입 온도계 주의사항


- 1) 액체 충전 온도계의 경우 글리세린 또는 실리콘 충전 액체를 사용하는 것이 일반적입니다. 그러나 이러한 유체는 모든 응용 분야에 적합하지 않을 수 있습니다. 산소, 염소, 질산, 과산화수소 등을 포함하지만 이에 국한되지 않는 강력한 산화제가 포함된 곳에서는 이러한 작업을 피해야 합니다.
- 2) 액체 충전 온도계는 충전재에 대한 온도 영향으로 인해 모든 범위에서 사용 가능하지 않을 수 있습니다. 액체로 채워진 바이메탈 온도계는 스템과 케이스를 포함하여 유체로 완전히 채워져 있으므로 충전 부분이 공정 온도에 노출됩니다. 온도가 상승하면 충전재가 팽창하여 케이스 내부의 압력이 높아질 뿐만 아니라 극한의 온도에 지속적으로 노출되면 품질이 저하될 수도 있습니다.

6. 유지 보수

- 1) 상용 온도는 최고 눈금의 75% 이하에서 사용해야 합니다.
- 2) 온도 범위를 초과하는 온도를 절대 가하지 말아야 합니다.
- 3) 급격한 온도변화를 피해야 합니다.
- 4) 배관 라인의 진동 및 맥동 또는 주위 온도를 확인하여, 필요하면 모세관 튜브를 이용한 제품인 충만식 타입을 선정해서 사용해야 합니다.
- 5) 제품은 6개월에 1~2회 정도 정기적으로 정상 작동 유/무를 확인해 주십시오.
- 6) 지시계 오차가 큰 경우 제품을 분해하여 점검하여 주십시오.

■ 액체 충전 타입 온도계의 경우

- 1) 오일 주입구 캡은 옥외 설치 시 절단하지 마시고 정기적으로 내압을 방출하여 주십시오.
- 2) 우천시 수분이 유입될 수 있습니다.
- 3) 부득이한 경우 오일 주입구 캡은 완전히 절단하지 마시고 그림과 같이 절반만 절단 하십시오.

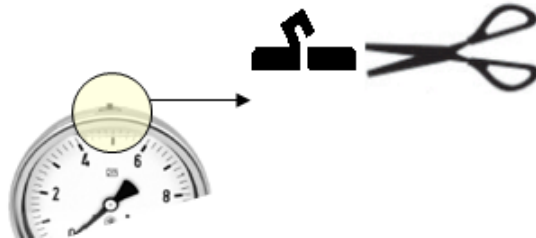

- 4) 오일이 부족하여 보충할 경우에는 제조사로부터 사용된 오일이나 성분을 받아 가장 유사한 오일을 보충하십시오. 액체 충전형은 케이스에 글리세린, 실리콘 오일 등의 액체를 전체 부피의 75% 이상 충전합니다. 단 100%충진하지 않도록 주의하십시오.



Dial Size	오일 주입량
100	약 240~265 ml
160	약 630~695 ml

오일 주입량 테이블은 케이스 부피의 75%에 10%의 여유량으로 참고하십시오.

제품의 특성에 따라 다를 수 있으며, 첨부된 사진을 참고하고 필요한 경우 육안으로 확인하여 보충하십시오. 기타 주의 사항은 5.2항의 “액체 충전 타입 온도계 주의사항” 참조하십시오.

7. 결합

- 1) 지시침이 흔들릴 경우에는 다음 사항을 확인해주시시오.
→ 연결부의 느슨한 체결, 연결부의 마모, 설치 현장 주위의 진동
- 2) 진동이 심한 경우 설치 장소의 변경 또는 충만식 온도계를 사용해 주십시오.
- 3) 지시침이 가리키는 온도가 실제 온도와 다를 경우에는 온도계 후면의 영점 조절 장치를 이용하여 조절해 주십시오.
- 4) 영점 조절 장치로 조절이 어려울 때는 당사에 문의해주시시오.

8. 사용자 의무

- 1) 모든 온도계 디자인에서는 올바른 설치가 가장 중요합니다. 잘못된 설치는 궁극적으로 부정확한 온도 판독으로 이어질 수 있습니다.
- 2) 본 제품은 사용 시 사용설명서의 규정에 따르지 않아 발생하는 손상이나 임의 개조, 변경, 수리 시에는 제조사는 책임을 지지 않으며 또한 제품의 보증도 소멸합니다.
- 3) ㈜와이즈는 사용자의 선택을 지원할 수 있으나 어떠한 책임을 지지는 않습니다

9. 제품의 반환

- 1) 재교정 또는 수리를 위하여 반환할 경우 원래의 포장이나 안전한 포장 방법을 사용하여야 하며 관련 서류도 함께 반환하여야 합니다.
- 2) 운송 중 제품이 습기나 먼지 및 기타 오염원에 노출되지 않도록 해야 합니다.
- 3) 운송 중 제품이 진동이나 충격에 노출되지 않도록 포장하여야 합니다.
- 4) 운송 중 파손된 제품은 반드시 서면으로 기록하여야 하며, 설치지연에 대한 배상은 운송회사에 청구할 수 있습니다.

본 설명서의 내용은 심혈을 기울여 제작되었지만, 오타자 또는 수정해야 할 내용이 있을 수 있으니 이점 양해하여 주시기 바랍니다. 본 제품의 규격 및 외관은 품질 향상을 위해 사전 통보 없이 변경될 수 있으며, (주)와이즈는 이에 대한 변경 권리를 가집니다. 본 사용설명서에서 사용하는 그림은 예시를 위한 것으로 실제와 다를 수 있습니다.

용인공장

경기도 용인시 기흥구 덕영대로 2022
(상갈동)

www.wisecontrol.com

A/S 관련문의

경기도 용인시 기흥구 덕영대로 2022
(상갈동)

webmaster@wisecontrol.com

홈페이지: 고객센터>기술/견적문의

(주)와이즈 서울사무소

서울특별시 금천구 가산디지털1로 181
(가산동, 가산 W CENTER) 19층

T. 02-300-2300

F. 02-300-2400

