


# JUMO mTRON T

## Measuring, Control, and Automation System

### Router Module

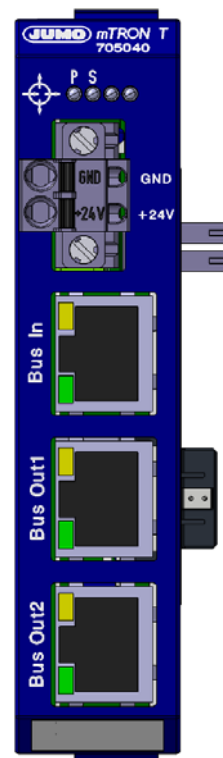

## Installation Instructions



70504000T94Z001K000

V2.00/EN/00548130



<b>1</b>	<b>Introduction</b>	<b>.5</b>
1.1	Available technical documentation	5
1.1.1	General information	5
1.1.2	Base units	5
1.1.3	Input/output modules	6
1.1.4	Special modules	6
1.1.5	Operating, visualization, recording	7
1.1.6	Power supply units	7
1.2	Safety information	8
1.2.1	Warning symbols	8
1.2.2	Note signs	8
1.2.3	Intended use	9
1.2.4	Qualification of personnel	9
1.3	Acceptance of goods, storage, and transport	10
1.3.1	Checking the delivery	10
1.3.2	Notes on storage and transport	10
1.3.3	Returning goods	10
1.3.4	Disposal	11
1.4	Identifying the device version	12
1.4.1	Nameplates	12
1.4.2	Order details	13
1.4.3	Scope of delivery	13
1.4.4	General accessories	14
1.5	Brief description	15
1.5.1	Block diagram	15
1.6	LED displays	16
1.6.1	Display modes	16
1.6.2	System states and errors	17
1.6.3	LEDs on the RJ45 sockets	17
<b>2</b>	<b>Mounting</b>	<b>.19</b>
2.1	General information on installation/dismounting	19
2.2	Installation/dismounting on DIN rail	20
2.2.1	Special modules	21
2.3	Replacing module inserts	24
2.3.1	Special modules	24
2.4	Dimensions	26
<b>3</b>	<b>Electrical connection</b>	<b>.27</b>
3.1	Installation notes	27
3.2	Electrical isolation	28
3.3	Connection diagram	29
3.3.1	Display and connection elements	29
3.3.2	Interfaces	30

# Contents

---

3.3.3	Voltage supply .....	30
3.4	Functional test .....	31
<b>4</b>	<b>Appendix .....</b>	<b>33</b>
4.1	Technical data .....	33
4.1.1	Interfaces .....	33
4.1.2	Electrical data .....	33
4.1.3	Case and ambient conditions .....	34
4.1.4	Approval/approval marks .....	34
4.2	China RoHS .....	35

## 1.1 Available technical documentation

The documents specified below are available for the measuring, control, and automation system (previous document number in parentheses).

### 1.1.1 General information

Product	Type of documentation	No.	Printed	PDF file
Measuring, control, and automation system	Data sheet	70500000T10...	-	X
	System manual <sup>1</sup>	70500000T90... (B 705000.0)	X	-
	Setup program manual	70500000T96... (B 705000.6)	-	X
	System description <sup>2</sup>	70500000T98... (B 705000.8)	-	X

<sup>1</sup> Accessory subject to charge

<sup>2</sup> Includes an overview of the purpose and content of all documents

### 1.1.2 Base units

Product	Type of documentation	No.	Printed	PDF file
Central processing unit	Data sheet	70500100T10...	-	X
	Operating manual	70500100T90... (B 705001.0)	-	X
	Modbus interface description	70500100T92... (B 705001.2.0)	-	X
	PROFIBUS-DP interface description	70500103T92... (B 705001.2.3)	-	X
	digiLine interface description	70500106T92...	-	X
	Installation instructions	70500100T94... (B 705001.4)	X	X
	CODESYS OPC server operating manual	70500151T90... (B 705001.5.1)	-	X
	Process engineering application operating manual	70500152T90...	-	X
	Operating manual Thyristor power controller (type 70906x; integration in the measuring, control, and automation system)	70500153T90...	-	X

# 1 Introduction

---

## 1.1.3 Input/output modules

Product	Type of documentation	No.	Printed	PDF file
Multichannel controller module	Data sheet	70501000T10...	-	X
	Operating manual	70501000T90... (B 705010.0)	-	X
	Installation instructions	70501000T94... (B 705010.4)	X	X
Relay module 4-channel	Data sheet	70501500T10...	-	X
	Operating manual	70501500T90... (B 705015.0)	-	X
	Installation instructions	70501500T94... (B 705015.4)	X	X
Analog input module 4-channel	Data sheet	70502000T10...	-	X
	Operating manual	70502000T90... (B 705020.0)	-	X
	Installation instructions	70502000T94... (B 705020.4)	X	X
Analog input module 8-channel	Data sheet	70502100T10...	-	X
	Operating manual	70502100T90... (B 705021.0)	-	X
	Installation instructions	70502100T94... (B 705021.4)	X	X
Analog output module 4-channel	Data sheet	70502500T10...	-	X
	Operating manual	70502500T90...	-	X
	Installation instructions	70502500T94...	X	X
Digital input/output module 12-channel	Data sheet	70503000T10...	-	X
	Operating manual	70503000T90... (B 705030.0)	-	X
	Installation instructions	70503000T94... (B 705030.4)	X	X

## 1.1.4 Special modules

Product	Type of documentation	No.	Printed	PDF file
Router module	Data sheet	70504000T10...	-	X
	Installation instructions	70504000T94... (B 705040.4)	X	X

## 1.1.5 Operating, visualization, recording

Product	Type of documentation	No.	Printed	PDF file
Multifunction panel 840	Data sheet	70506000T10...	-	X
	Operating manual	70506000T90... (B 705060.0)	-	X
	Modbus interface description	70506000T92... (B 705060.2.0)	-	X
	Installation instructions	70506000T94... (B 705060.4)	X	X
Operating panels	Data sheet	70506500T10...	-	X
	Operating manual	70506500T90...	-	X

## 1.1.6 Power supply units

Product	Type of documentation	No.	Printed	PDF file
24 V power supply units	Data sheet	70509000T10...	-	X
	Operating instructions QS5.241		X	-
	Operating instructions QS10.241		X	-

# 1 Introduction

---

## 1.2 Safety information

### 1.2.1 Warning symbols



**DANGER!**

This symbol indicates that **personal injury caused by electrical shock** may occur if the respective precautionary measures are not carried out.



**WARNING!**

This symbol in connection with the signal word indicates that personal injury may occur if the respective precautionary measures are not carried out.



**CAUTION!**

This symbol in connection with the signal word indicates that **damage to assets or data loss** will occur if the respective precautionary measures are not taken.



**CAUTION!**

This symbol indicates that **components could be destroyed** by electrostatic discharge (ESD = Electro Static Discharge) if the respective cautionary measures are not taken. Only use the ESD packages intended for this purpose to return device inserts, assembly groups, or assembly components.



**READ DOCUMENTATION!**

This symbol – placed on the device – indicates that the associated **device documentation has to be observed**. This is necessary to recognize the kind of the potential hazards as well as the measures to avoid them.

### 1.2.2 Note signs



**NOTE!**

This symbol refers to **important information** about the product, its handling, or additional use.



**REFERENCE!**

This symbol refers to **further information** in other sections, chapters, or manuals.



**FURTHER INFORMATION!**

This symbol is used in the tables and refers to **further information** in connection with the table.



**DISPOSAL!**

This device and the batteries (if installed) must not be disposed in the garbage can after use! Please ensure that they are disposed properly and in an **environmentally friendly manner**.

## 1.2.3 Intended use

The modules described are intended for measuring, control, and automation tasks in an industrial environment, as described in the technical data. Other uses or uses beyond those defined are not viewed as intended uses.

The modules are built according to the relevant standards and directives as well as the applicable safety regulations. Nevertheless, incorrect use may lead to bodily injury or property damage.

To avoid danger, the modules may only be used:

- For the intended use
- When in good order and condition
- When taking into account the technical documentation provided

Even if a module is used correctly and according to the intended use, it may still cause application-related dangers (e.g. due to missing safety devices or incorrect settings).

## 1.2.4 Qualification of personnel

This document contains the necessary information for the intended use of the modules to which it relates.

It is intended for technically qualified personnel who have received special training and have the appropriate knowledge in the field of automation technology (measuring, process, and control technology).

The appropriate level of knowledge and the technically fault-free implementation of the safety information and warnings contained in the technical documentation provided are prerequisites for risk-free mounting, installation, and startup as well as for ensuring safety when operating the described modules. Only qualified personnel have the required specialist knowledge to correctly interpret and implement the safety information and warnings contained in this document in specific situations.

# 1 Introduction

---

## 1.3 Acceptance of goods, storage, and transport

### 1.3.1 Checking the delivery

- Ensure that the packaging and contents are not damaged
- Check that the delivery is complete using the delivery papers and the order details
- Inform the supplier immediately if there is any damage
- Store damaged parts until clarification is received from the supplier

### 1.3.2 Notes on storage and transport

- Store the module in a dry and clean environment. Observe the admissible ambient conditions (see "Technical data")
- The transport of the module is to be shockproof
- The original packaging provides optimum protection for storage and transport

### 1.3.3 Returning goods

In the event of repair, please return the module in a clean and complete state. Use the original packaging to return goods.

#### ***Accompanying letter for repair***

Please include the completed accompanying letter for repair when returning goods. Do not forget to state the following:

- Description of the application and
- Description of the error that has occurred

The accompanying letter for repair can be downloaded online from the manufacturer's website (use the search function if necessary).

#### ***Protection against electrostatic discharge (ESD)***

(ESD = electrostatic discharge)

To prevent damage from ESD, electronic modules or components must be handled, packaged, and stored in an ESD-protected environment. Measures against electrostatic discharge and electrical fields are described in DIN EN 61340-5-1 and DIN EN 61340-5-2 "Protection of electronic devices from electrostatic phenomena".

When returning electronic modules or components, please note the following:

- Sensitive components must only be packaged in an ESD-protected environment. Workspaces such as this divert electrostatic charges to ground in a controlled manner and prevent static charges due to friction capacities.
- Only use packaging for ESD-sensitive modules/components. These must consist of conductive plastics.

No liability can be assumed for damage caused by ESD.

**CAUTION!**

Electrostatic charges occur in non-ESD protected environments.  
Electrostatic discharges can damage modules or components.  
For transport purposes, use only the ESD packaging provided.

## 1.3.4 Disposal

### Disposing of the device

**DISPOSAL!**

Devices and/or replaced parts should not be placed in the refuse bin at the end of their service life as they consist of materials that can be recycled by specialist recycling plants.

Dispose of the device and the packaging material in a proper and environmentally friendly manner.

For this purpose, observe the country-specific laws and regulations for waste treatment and disposal.

### Disposing of the packaging material

The entire packaging material (cardboard packaging, inserts, plastic film, and plastic bags) is fully recyclable.

# 1 Introduction

---


## 1.4 Identifying the device version

### 1.4.1 Nameplates

#### Position

The nameplate (B) is affixed to the module case.

An additional nameplate with reduced information is located on the module insert (A). This duplicate identification is important when replacing a module insert or retrofitting optional modules.

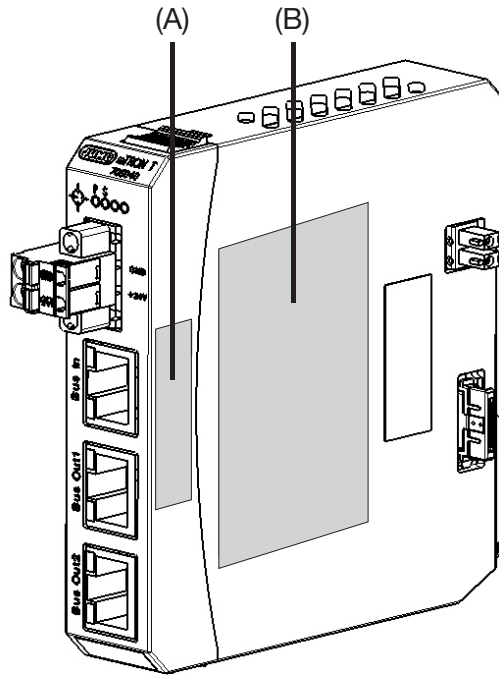

#### Contents

The nameplates contain important information. This includes:

Description	Designation on the name-plate	Example
Device type (A + B)	Typ	705040/36
Part no. (B)	TN	00XXXXXX
Fabrication number (A + B)	F-Nr	0070033801211010006
Voltage supply (B)	-	DC 24 V +25/-20 %

#### Device type

Compare the specifications on the nameplate with the order.

Identify the supplied device version using the order details of the respective module.

#### Part no. (TN)

The part no. clearly identifies an article in the catalog. It is important for communication between the customer and the sales department.

## Fabrication no. (F-Nr)

Among other things, the fabrication number contains the date of production (year/week).

Example: F-Nr = 00700338012**1101**0006

The figures concerned are in positions 12, 13, 14, and 15 (from the left).

The device was therefore produced in the 1st calendar week of 2011.

## 1.4.2 Order details

<b>(1) Basic type</b>	
705040	Router module
<b>(2) Voltage supply</b>	
36	DC 24 V +25/-20 %
<b>(3) DNV GL approval</b>	
000	Without approval
062	With DNV GL approval <sup>1</sup>

<sup>1</sup> The power supply unit used must also have a DNV GL or GL type approval (e.g. type 705090).

Order code                    **(1)**                    **(2)**                    **(3)**  
                                   /  /   
Order example            705040   /   36   /   000

## 1.4.3 Scope of delivery

1 router module
1 cover for system bus
2 screw-on end clamps for DIN rail
1 Installation Instructions

# 1 Introduction

---

## 1.4.4 General accessories

Description	Part no.
JUMO mTRON T system manual, English	00575577
Setup program with program editor JUMO mTRON T (on MiniDVD), incl. USB cable (A-plug to mini-B-plug, 3 m)	00569494
Program editor JUMO mTRON T (on MiniDVD), incl. USB cable (A-plug to mini-B-plug, 3 m)	00622333
PCA3000/PCC JUMO software package	00431884
PC Evaluation Software PCA3000	00431882
Release automatic print for PC Evaluation Software PCA3000	00505548
PCA Communication Software PCC	00431879
Plant Visualization Software JUMO SVS3000: See data sheet 700755	-
USB cable A-plug mini-B-plug 3 m	00506252

Content of the Mini-DVD:

- Setup program with program editor JUMO mTRON T in case of part no. 00569494
- Program editor JUMO mTRON T in case of part no. 00622333
- CODESYS programming software (free version)
- CODESYS Repository Package - Operating panels (free version)
- GSD file JUMO mTRON T - CPU (free version)
- PC Evaluation Software PCA3000 (30-day trial version)
- PCA Communication Software PCC (30-day trial version)
- Documentation in PDF format

1.5 Brief description

The router module is used to achieve decentralization within the automation system, which means that the input/output modules are dispersed to several DIN rails/switch cabinets. A distance of up to 100 m can lie between two router modules, between a router module and a base unit, or between a router module and a multifunction panel. A maximum of 30 router modules and a maximum of 30 input/output modules is possible in a system.


LEDs are used to indicate applied voltage supply and the operating status of the module.

The electrical connection of the voltage supply for the router module is carried out at the front through a removable terminal strip.

No configuration of the router module is required. The router module is simply integrated into the overall system by the setup program. For special applications such as hot-connect the address of the router module can be set by rotary coding switches.

For service work, the module insert can be easily pulled out of the case at the front. The case including the bus PCB remains mounted on the DIN rail.

1.5.1 Block diagram

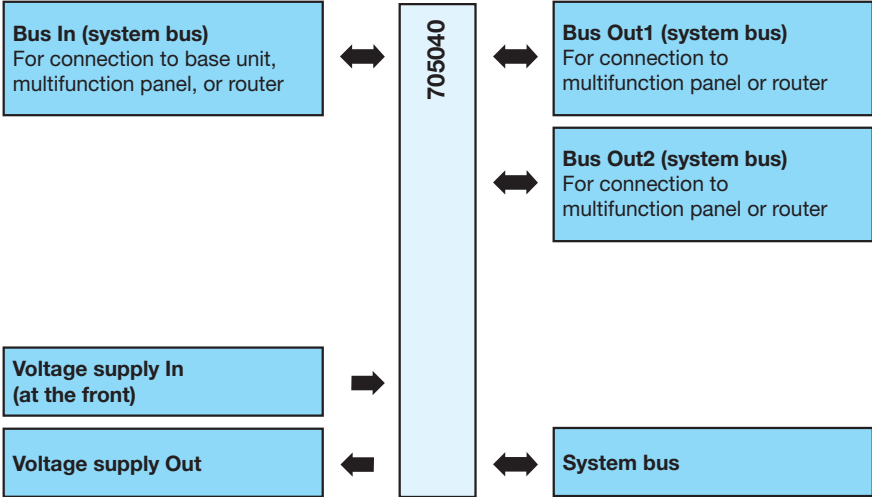

# 1 Introduction

## 1.6 LED displays

### "P" LED (Power)

The LED is permanently lit in green if the module is being supplied with voltage.

### "S" LED (Status)

This LED indicates the status of the module. Diagnostics requires the setup program or a Web browser as appropriate.

### 1.6.1 Display modes

The following table lists all possible states of the "S" LED (Status).

Display mode	Description	Green symbol	Red symbol
---	LED state not relevant	---	---
Off	LED off	○	○
On	LED on (permanently lit)	■	●
Flickering	LED flickers (50 ms on, 50 ms off)	■ ■ ■ ■ ■	● ● ● ● ●
Single flickering	LED flashes briefly (50 ms on, 200 ms off)	■ □ □ □ □	● ○ ○ ○ ○
Blinking	LED flashes (200 ms on, 200 ms off)	■ □ ■ □ ■	● ○ ● ○ ●
Single flash	LED flashes once (200 ms on, 1000 ms off)	■ □ □	● ○ ○
Double flash	LED flashes twice (on/off/on for 200 ms each time, 1000 ms off)	■ ■ □ □	● ● ○ ○
Triple flash	LED flashes three times (on/off/on/off/on for 200 ms each time, 1000 ms off)	■ ■ ■ □ □	● ● ● ○ ○
Quadruple flash	LED flashes four times (on/off/on/off/on/off/on for 200 ms each time, 1000 ms off)	■ ■ ■ ■ □ □	● ● ● ● ○ ○
Blinking red/green	LED flashes red and green (200 ms red, 200 ms green)	● ■ ● ■	
On green/ Single flickering red	LED lights up green, flashes red (50 ms red)	■ ●	

## 1.6.2 System states and errors

The following table lists all the system states and errors that are indicated by the "S" LED (Status). In most cases, further diagnostics must be performed with the setup program.

Category	"S" LED (Status)	Meaning	Diagnostics with	Recommended action
Bus status	○	No connection to central processing unit	LED	Check whether the central processing unit is running; check cabling and topology
Bus status	○	System in "Stop" (INIT) state – no error, only in start phase	LED	
Bus status	■ □ ■ □ ■	System in "Stop" (PREOP) state – no error, only in start phase	LED	
Operation	■ □ □ (Priority 3)	System in "Stop" (SAFEOP) state – no error	LED	
Operation	■ (Priority 3)	System in "Run" (OP) state – no error	LED	

## 1.6.3 LEDs on the RJ45 sockets

The LEDs indicate the connection status between the router module and the opposite side.

Green LED	Orange LED	Meaning	Recommended action
Off	Off	No connection	Check cabling and topology
On	Off	Connection with 10 Mbit/s	
On	On	Connection with 100 Mbit/s	
Flickering	Off	Connection with 10 Mbit/s and data transfer	
Flickering	On	Connection with 100 Mbit/s and data transfer	

# 1 Introduction

---

### 2.1 General information on installation/dismounting

**DANGER!**

With multichannel controller module 705010 and relay module 705015, the load circuits from relay or solid state relay outputs can be operated with a dangerous electrical voltage (e.g. 230 V).

There is a risk of electric shock.

Prior to the installation/dismounting of these modules or the removal of the module insert, the load circuits are to be disconnected from the voltage and the terminal strips are to be removed from the module. This work must only be performed by qualified personnel.

**WARNING!**

The modules must never be installed in areas with an explosion hazard.

There is the risk of an explosion.

The entire system must only be used outside of areas with an explosion hazard.

**Mounting site**

All modules have protection type IP20 and are only intended for use in fireproof control cabinets or switch boxes. The mounting site should be virtually vibration-free. Electromagnetic fields caused by equipment such as motors or transformers should be avoided.

Multifunction panel 840 has protection type IP67 at the front and is intended for installation in a panel cut-out. The rear has protection type IP20.

**Climatic conditions**

The ambient temperature and the relative humidity at the mounting site must correspond to the technical data. Aggressive gases and vapors have a negative effect on the operating life of the modules. The mounting site must be free from dust, powder, and other suspended matter so that the cooling slots do not become blocked.

**DIN rail**

All modules are mounted on a DIN rail according to DIN EN 60715 (35 mm × 7.5 mm × 1 mm). For reasons of stability, the spacing of the fastening screws for the DIN rail should not exceed 200 mm. The minimum distances for the modules that are specified in the module-specific installation or operating instructions must be observed.

**Installation position**


The DIN rail should be mounted horizontally so that all modules are arranged vertically. Otherwise the admissible ambient temperature range will be restricted.

**Space requirement**

The modules require the minimum distances shown in the following figure for the purpose of installation/dismounting and for future maintenance or replacement. In the event of shorter distances the minimum bending radius of the cables, the performance of the electrical installation, and the clear arrangement of the plant are no longer guaranteed.

## 2 Mounting

### Minimum distances

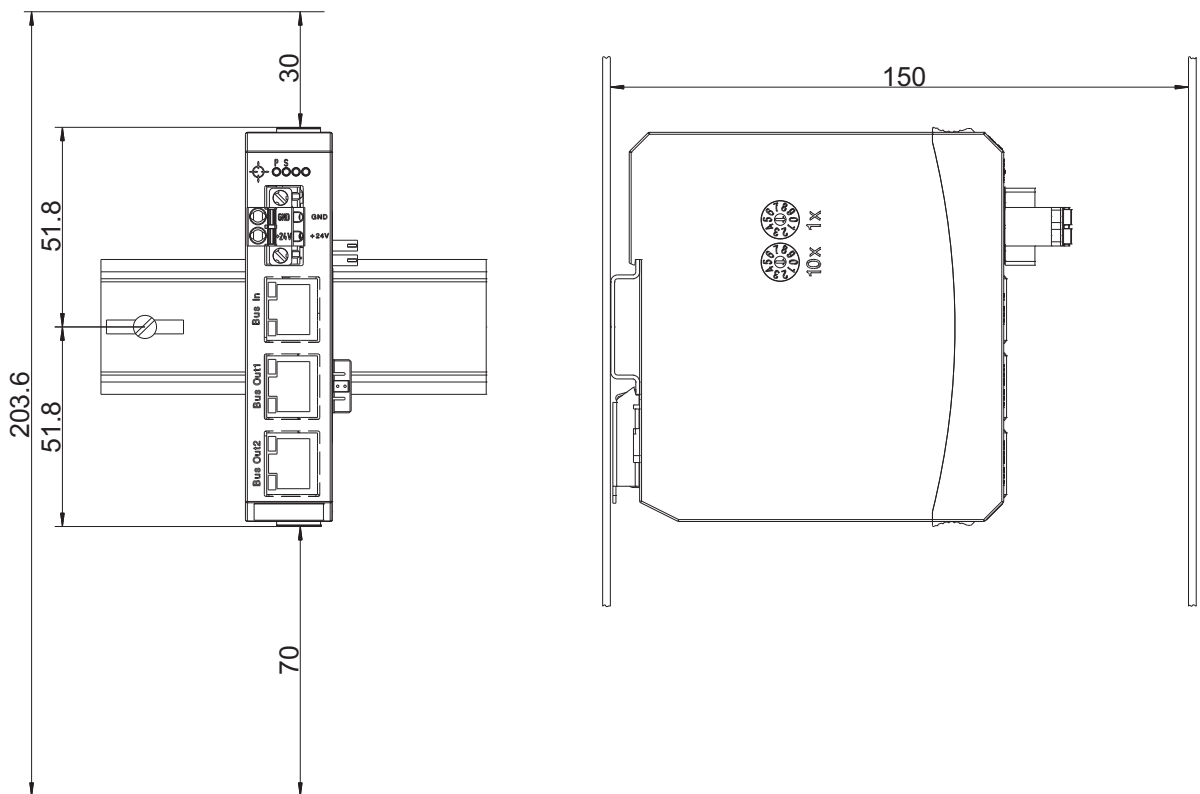

## 2.2 Installation/dismounting on DIN rail

All modules in the system are intended for installation on a DIN rail according to DIN EN 60715 (35 mm × 7.5 mm × 1 mm).

The following must always be installed on the left, at the start of the DIN rail:

- A central processing unit *or*
- A router module

These modules connect the input/output modules to the voltage supply and the system bus.



### NOTE!

To determine the required minimum width of the DIN rail, the widths of the individual modules are to be added (see technical data of the modules in the respective data sheet or the module-specific installation instructions).

The widths of the cover (17.5 mm) and both end brackets (each 9.5 mm) should also be taken into consideration:  $17.5 \text{ mm} + 2 \times 9.5 \text{ mm} = 36.5 \text{ mm}$ .



### NOTE!

Modules with a recent production date have two fixing knobs on the right side of the case and on the left two round holes (for greater torsional strength of the entire module assembly). If a module with fixing knobs is to be inserted into an existing module assembly and the adjacent module does not have the corresponding holes, the fixing knobs must be completely removed to ensure electrical contact between the modules. For example, a cutter knife and a file can be used for removal.




### NOTE!

Two rotary coding switches for setting the alias device address are located on the router module's left side. If necessary, the setting should be done before the router module is mounted. Otherwise one has to ensure that the rotary coding switches are still accessible after mounting.

The "10x" switch is used to set the tens digit of the alias device address, the "1x" switch is used for the unit digit. For more information about setting the alias device address please refer to the setup program manual B 705000.6 (chapter "Hardware arrangement").

### 2.2.1 Special modules

#### Installation, using the example of a router module 705040

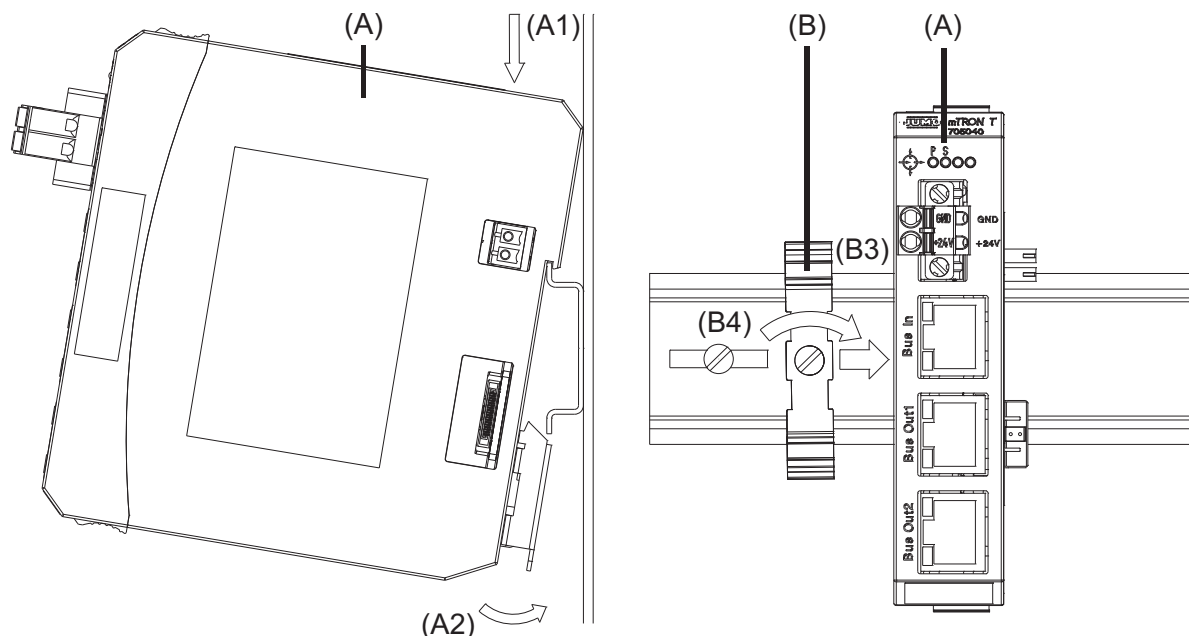


Procedure:


Step	Activity
1	Mount the router module (A) in the DIN rail from above (A1).
2	Pivot the router module (A) downward until it snaps into place (A2).
3	Position the end bracket (B) on the DIN rail and move to the right against the router module (B3).
4	Fasten the end bracket (B) using a screwdriver (B4). For this purpose, ensure that the end bracket is positioned flush against the router module.

## 2 Mounting

### Dismounting, using the example of a router module 705040

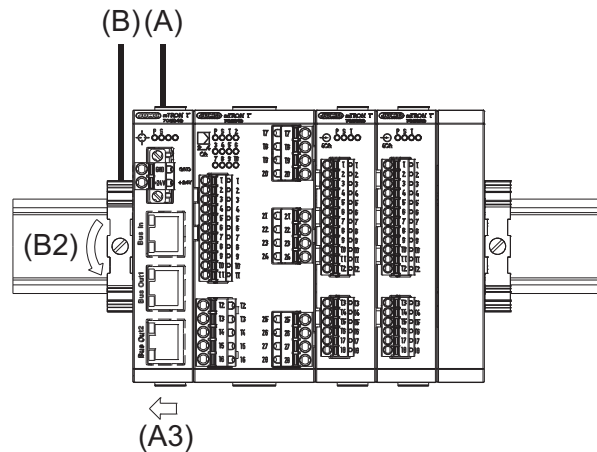

### Removing the router module from the DIN rail

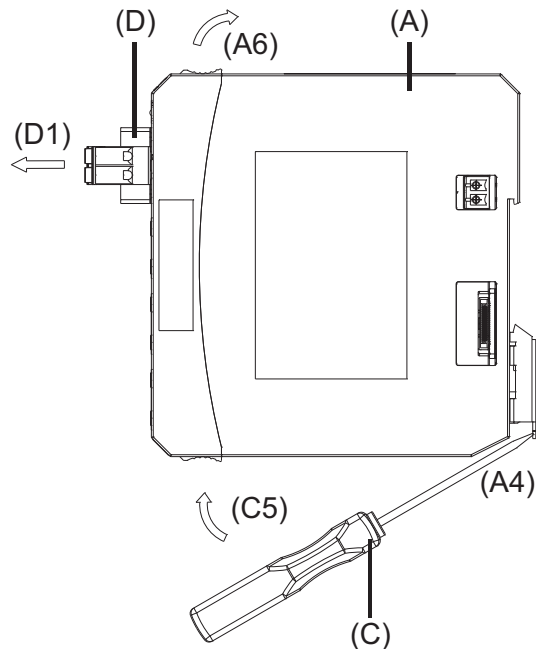

Procedure:

Step	Activity
1	Remove the connection cables if required (Bus In, Bus Out1, Bus Out2). ➔ The router module, all modules on the right next to the router module, and, where applicable, additional devices connected via Bus Out1 or Bus Out2 (router modules, multi-function panel) are isolated from the system bus.
2	If required, use a screwdriver to release the wired terminal (D) of the router module (A) and pull off toward the front (D1). ➔ The connection to the voltage supply is isolated.
3	Fully release the end bracket (B) using a screwdriver (B2), press upward from below, pivot toward the front, and remove from the DIN rail. Note: The end bracket does not need to be removed from the DIN rail if there is sufficient space to the side to move it at least 10 mm to the left.

## 2 Mounting

---


Step	Activity
4	Move the router module (A) to the left (A3) until the side contacts on the right side of the router module are exposed.
5	Insert a suitable screwdriver (C) into the unlocking slot of the router module (A4) and press upward (C5).
6	Pivot the router module (A) upward off the DIN rail (A6) and remove it.

## 2 Mounting

### 2.3 Replacing module inserts

#### 2.3.1 Special modules

##### Replacing the module insert of a router module 705040

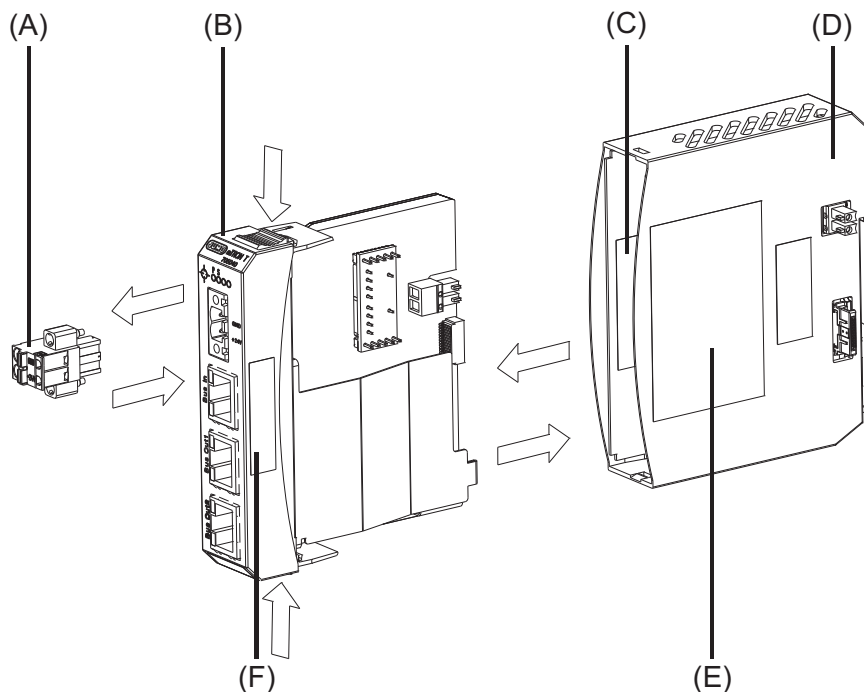

For service purposes, the case (D) can remain in the system; only the module insert (B) is replaced. Thanks to the hot connect functionality of the router module, this can even be performed during operation with the corresponding configuration (alias device address).

The new module insert also has a new nameplate (F), which differs from the old one at least with regard to the fabrication number and is no longer identical to nameplates (E) and (C) on the case (D).

Therefore, in the event of replacement, the module insert will be supplied along with a new nameplate that will be affixed to the case (D) in place of the old nameplate (C). This means that the specifications of nameplates (F) and (C) once again correspond to one another.

#### Removing the module insert

Step	Activity
1	Pull off the connection cables if required (Bus In, Bus Out1, Bus Out2).
2	Pull off the wired terminal strip (A) toward the front.
3	Press the old module insert (B) together on the grooved surfaces at the top and bottom and remove from the case (D).

### Mounting the module insert

Step	Activity
1	Affix the new nameplate in place of the old nameplate (C) in the case.
2	Hold the new module insert (B) at the grooved surfaces on the top and bottom and insert them into the case (D). For this purpose, ensure that the board of the module insert slides into the guide rails of the case.
3	Reattach the wired terminal strip (A).
4	Reconnect the connection cables if required (Bus In, Bus Out1, Bus Out2).

**NOTE!**

When mounting the module insert, ensure that the snap holders (under the grooved surfaces) audibly snap into place.


**NOTE!**

The availability of the system can be increased through the storage of module inserts.

## 2 Mounting

---

### 2.4 Dimensions

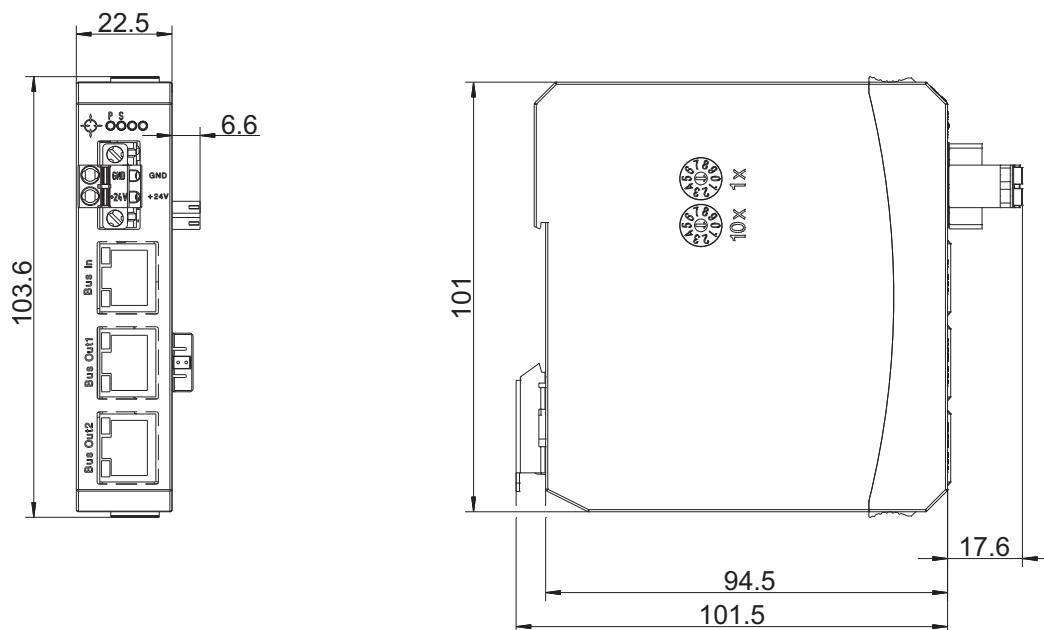

### 3.1 Installation notes

**NOTE!**

These installation notes apply for the entire measuring, control, and automation system and, on some occasions, are only applicable for a specific module.

The respective connection diagram shows the context.

**Requirements for the personnel**

- Work on the modules must only be carried out to the extent described and, like the electrical connection, only by qualified personnel.
- Before plugging and unplugging connection cables ensure that the person performing the work is electrostatically discharged (e.g. by touching grounded metallic parts).

**Cables, shielding, and grounding**

- When selecting the cable material, when installing, and when performing the electrical connection of the module, the regulations of DIN VDE 0100 "Erection of power installations with rated voltages up to 1000 V" and the respective national regulations (e.g. on the basis of IEC 60364) are to be observed.
- Certain cables must be heat resistant up to at least 80 °C at maximum load. The relevant instructions in the connection diagram of the affected modules must be observed.
- Route input, output, and supply cables separately and not parallel to one another.
- Only use shielded and twisted probe and interface cables. Do not route the lines close to current-carrying components or cables.
- For temperature probes, ground the shielding on one side in the control cabinet.
- Do not perform loophroughs on the grounding cables, but route the cables individually to a shared grounding point in the control cabinet; in doing so, ensure that the cables are as short as possible.  
Ensure that the equipotential bonding is correct.

**Electrical safety**

- Isolate power supply units from the voltage supply on the primary side if there is a risk of touching parts with dangerous electrical voltage (e.g. 230 V) in the course of work.
- The fuse rating of the power supply units on the primary side should not exceed a value of 10 A (inert).
- With modules with relay or solid state relay outputs, the load circuits can be operated with a dangerous electrical voltage (e.g. 230 V). Disconnect load circuits from the voltage supply during installation/dismounting and electrical connection.
- In order to prevent the destruction of the relay or solid state relay outputs in the event of an external short circuit in the load circuit, the load circuit should be fused to the maximum admissible output current.
- The modules are not suitable for installation in areas with an explosion hazard.
- In addition to a faulty installation, incorrectly set values on the module could also impair the correct function of the following process. Therefore, ensure that safety devices independent of the module (e.g. overpressure valves or temperature limiters/monitors) are available and that it is only possible for qualified personnel to define settings. Please observe the corresponding safety regulations in this context.


# 3 Electrical connection

---

## References to other information

- The electromagnetic compatibility meets the standards and regulations cited in the technical data.
- The USB device interface and voltage supply in the central processing unit 705001 are **not** electrically isolated. In general, please observe the specifications regarding electrical isolation.

## 3.2 Electrical isolation

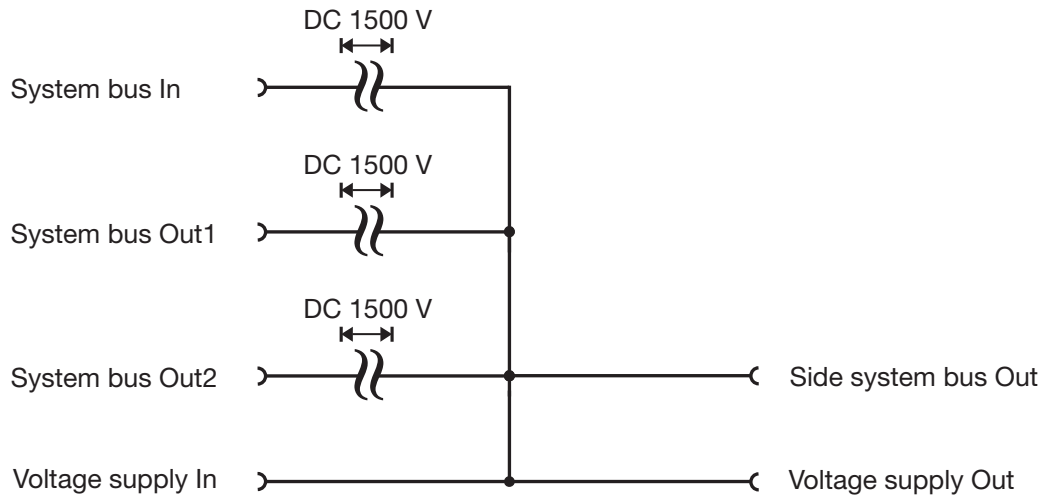

### 3.3 Connection diagram




#### CAUTION!

At maximum load, the temperature at the "+24 V" and "GND" terminals (Voltage supply In) may exceed 60 °C.

As a result the insulation of the cable may be damaged.

The cable must be heat resistant up to at least 80 °C.




#### 3.3.1 Display and connection elements

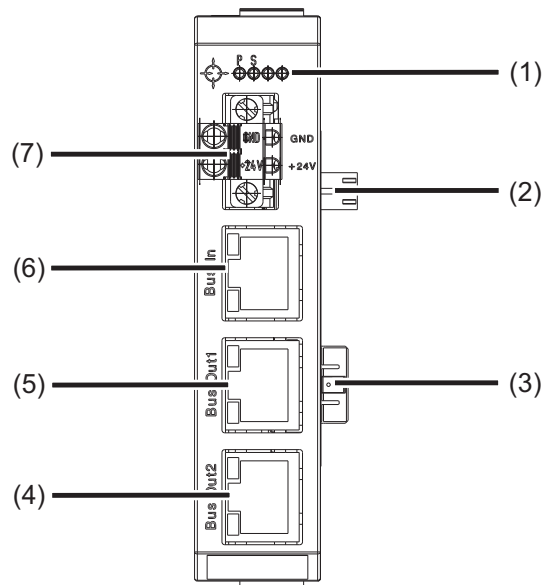

- (1) Status displays (LED)
- (2) Voltage supply Out, DC 24 V
- (3) Side system bus Out
- (4) System bus Out2
- (5) System bus Out1
- (6) System bus In
- (7) Voltage supply In, DC 24 V

## 3 Electrical connection

### 3.3.2 Interfaces

Connection	Designation	Connection element
System bus In (input)	Bus In	 1 TX+ transmit data + 2 TX- transmit data - 3 RX+ receive data + 6 RX- receive data -
System bus Out1 (output)	Bus Out1	 1 TX+ transmit data + 2 TX- transmit data - 3 RX+ receive data + 6 RX- receive data -
System bus Out2 (output)	Bus Out2	 1 TX+ transmit data + 2 TX- transmit data - 3 RX+ receive data + 6 RX- receive data -

### 3.3.3 Voltage supply

Connection	Terminals	Symbol and terminal designation
DC 24 V	+24V and GND	+ ———— ○ +24V $U_x$ - ———— ○ GND

### 3.4 Functional test

Once the electrical connection is complete, the following points must be checked:

- 1) Voltage supply
- 2) Connection to system bus

#### Voltage supply

Signal	Meaning
LED "P" (Power) <b>is lit</b>	The router module is supplied with voltage.
LED "P" (Power) <b>is not lit</b>	<p>The router module is not supplied with voltage or there is a problem with the electrical function of the LED.</p> <p>Remedy:</p> <ul style="list-style-type: none"><li>• Check voltage supply at the "+24 V" and "GND" terminals of the router module.</li><li>• Check power supply unit and connection between the power supply unit and the router module.</li></ul> <p>If the "Power" LED does not light up despite a voltage supply being present, the module insert or – if the bus board inside the case is faulty – the entire router module must be replaced.</p>

#### Connection to system bus

The "Bus In" input must be connected to the "Bus Out" output of a base unit or of an upstream multifunction panel or router module.



#### **CAUTION!**

Under certain circumstances, swapped connection cables for Bus In, Bus Out1, and Bus Out2 are not detected by the system.

The system then starts with reversed strands.

To avoid this situation, the connection cables for Bus In, Bus Out1, and Bus Out2 must be labeled clearly. If necessary, the strands can be identified through the serial number of the modules.

#### Startup

The checks described above complete the process of installation and electrical connection. For the startup, the router module is integrated into the system through the definition of the hardware arrangement in the setup program. The router module itself does not need to be configured.

- ⇒ System description B 705000.8
- ⇒ Setup program manual B 705000.6

The "Introduction" section of this document contains an overview of all documentation for the measuring, control, and automation system.

### 3 Electrical connection

---

## 4.1 Technical data

### 4.1.1 Interfaces

Bus In (system bus) Application Number Connection Connection cable Cable length	For connection of a base unit, a router module or a multifunction panel 1 At the front, RJ45 socket Network cable (patch cable or crossover cable), at least CAT5 (S/FTP) Up to 100 m
Bus Out1 and Bus Out2 (system bus) Application Number Connection Connection cable Cable length	For connection of further router modules or a multifunction panel 2 At the front, RJ45 socket Network cable (patch or crossover cable), at least CAT5 (S/FTP) Up to 100 m

### 4.1.2 Electrical data

Voltage supply Connection Voltage input Residual ripple	At the front (removable 2-pole terminal strip with Push-In technology) DC 24 V +25/-20 % SELV 5 %
Current consumption	100 mA (at DC 19.2 V) Current consumption of lined-up modules also has to be considered (see „Hardware configuration“ in the setup program)!
Power consumption	2 W
Conductor cross section (voltage supply) Wire or strand without ferrule Strand with ferrule 2 x strand with twin ferrule with plastic collar	Min. 1.5 mm <sup>2</sup> , max. 2.5 mm <sup>2</sup> Min. 1.5 mm <sup>2</sup> , max. 2.5 mm <sup>2</sup> 1.5 mm <sup>2</sup>
Stripping length	10 mm
Electrical safety	Acc. to DIN EN 61010-1 Overvoltage category III, pollution degree 2
Electromagnetic compatibility Interference emission Interference immunity	Acc. to EN 61326-1 Class A – only for industrial use – Industrial requirements

## 4 Appendix

---

### 4.1.3 Case and ambient conditions


Case type	Plastic case for DIN rail mounting in the control cabinet (indoor use); DIN rail acc. to DIN EN 60715, 35 mm x 7.5 mm x 1 mm
Dimensions (W x H x D)	22.5 mm x 103.6 mm x 101.5 mm (without connection elements)
Weight	Approx. 125 g
Protection type	IP20, acc. to DIN EN 60529
Ambient temperature range	-20 to +55 °C
Storage temperature range	-40 to +70 °C
Resistance to climatic conditions	Relative humidity ≤ 90 % annual average without condensation (climatic class 3K3 acc. to DIN EN 60721-3-3 with extended temperature and humidity range)
Site altitude	Up to 2000 m above sea level
Mechanical ambient conditions <sup>1</sup>	Classification acc. to DIN EN 60721-3-3, table 6, class 3M2

<sup>1</sup> Test conditions are listed in the System Descripton B 705000.8.

### 4.1.4 Approval/approval marks

Approval mark	Testing agency	Certificate/certification number	Inspection basis	Valid for
c UL us	Underwriters Laboratories	E201387	UL 61010-1 (3. Ed.), CAN/CSA-22.2 No. 61010-1 (3. Ed.)	all types
DNV GL	DNV GL	TAA000016N	Class Guideline DNVGL-CG-0339	all types; a power supply unit with DNV GL or GL type approval is required (e.g. type 705090)

## 4.2 China RoHS

 产品组别 Product group: 705040 部件名称 Component Name	产品中有害物质的名称及含量 China EEP Hazardous Substances Information					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
外壳 Housing (Gehäuse)	○	○	○	○	○	○
过程连接 Process connection (Prozessanschluss)	○	○	○	○	○	○
螺母 Nuts (Mutter)	○	○	○	○	○	○
螺栓 Screw (Schraube)	○	○	○	○	○	○

本表格依据SJ/T 11364的规定编制。  
 This table is prepared in accordance with the provisions SJ/T 11364.  
 ○：表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。  
 Indicate the hazardous substances in all homogeneous materials' for the part is below the limit of the GB/T 26572.  
 x：表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。  
 Indicate the hazardous substances in at least one homogeneous materials' of the part is exceeded the limit of the GB/T 26572.

## 4 Appendix

---





**JUMO GmbH & Co. KG**

Street address:  
Moritz-Juchheim-Straße 1  
36039 Fulda, Germany

Delivery address:  
Mackenrodtstraße 14  
36039 Fulda, Germany

Postal address:  
36035 Fulda, Germany

Phone: +49 661 6003-0  
Fax: +49 661 6003-607  
Email: [mail@jumo.net](mailto:mail@jumo.net)  
Internet: [www.jumo.net](http://www.jumo.net)

**JUMO Instrument Co. Ltd.**

JUMO House  
Temple Bank, Riverway  
Harlow, Essex, CM20 2DY, UK

Phone: +44 1279 63 55 33  
Fax: +44 1279 62 50 29  
Email: [sales@jumo.co.uk](mailto:sales@jumo.co.uk)  
Internet: [www.jumo.co.uk](http://www.jumo.co.uk)

**JUMO Process Control, Inc.**

6733 Myers Road  
East Syracuse, NY 13057, USA

Phone: +1 315 437 5866  
Fax: +1 315 437 5860  
Email: [info.us@jumo.net](mailto:info.us@jumo.net)  
Internet: [www.jumousa.com](http://www.jumousa.com)

